



MIMPN

Recoil Starter Assembly

The Best Chinese General Engine Spare Parts Manufacturer



MIMPN
The Power of Dreams

mimpn.com

铭品机械 Products
Manual 产品手册

TAIZHOU MINGPIN MACHINERY CO.,LTD





MIMPIN

Recoil Starter Assembly

**ENTERPRISE
INTRODUCTION**

企业简介

台州市铭品机械有限公司创立于2006年，主要从事通用动力零部件的研发制造，是一家拥有雄厚实力的创新型全球化企业。目前，公司注册资本58万元，员工100余人。是行业内装备产品链最齐全的机械制造企业。

我们已经积累了丰富的专业知识和生产经验，同时建立了一套完整的质量控制系统，在生产过程中采用半自动化、自动化设备制造出可靠、稳定、优质的产品，赢得了海内外客户广泛的赞誉。

我们一贯秉承“至诚无息，博厚悠远”的文化核心理念，竭诚为广大客户提供最优质的产品和最真挚的服务。“诚”是铭品机械的事业原点和价值坐标。在国际化进程中，铭品机械对于“至诚无息，博厚悠远”的文化素养不断进行诠释和创新。企业的营销、科研机构等各部门。在覆盖全球的完备销售网络以及强大的技术支持下，企业正进一步探索如何更好的服务世界范围内的客户。

TAIZHOU MINGPIN MACHINERY CO.,LTD Was established in 2006, Professionally in developing and manufacturing general power parts, is one of global enterprise that have strength and innovative technical ability.Recently, our registered capital are 580000 Yuan,more than 100 employees. And is the most complete line equipment of machinery manufacturing enterprise in the industry.

We Accumulated a wealth of experience in professional knowledge and production. At the same time has established a complete quality control system, in the process of production use advanced Automation Equipment and semi-automatic equipment to make sure the quality of MINGPIN products. Always keep reliable, stable and high quality. Because of the strict quality control ,we Won a lot of praise from customers at home and abroad.

We have always adhering to the" Sincere business=Long-term business" mind Identify, We will adopt a sincere service and quality products to reward your kindness! "Honest" is the most important for MINGPIN. In the process of internationalization MINGPIN always keep on moving and innovating.

All of our department especially Sales and Technology department ,In the worldwide complete sales network and strong technical support,we are further explore how to supply good service to our customer from all over the world.



产品目录

PRODUCT CONTENTS

启动器系列	1-19
Recoil Starter Assembly	
导风罩系列	20-21
Fan Cover	
启动鼓系列	22-24
Sleeve	
零部件.....	25-44
Spare Parts	

**TRY TO BECOME THE WORLD'S TOP
GENERAL POWER PARTS MANUFACTURER
AND ALWAYS KEEP MOVING**

名称: 152F三孔启动器 NO: 152F10

 152 Recoil starter assy
(With steel plate ratchet)3 holes


001

名称: 152F六孔启动器 NO: 152F11

 152 Recoil starter assy
(With steel plate ratchet)6 holes


002

名称: 154F铁爪启动器 NO: 154F10

 HONDA154 Recoil starter assy
(With steel plate ratchet)


003

名称: 154F铁壳海马爪启动器 NO: 154F11

 HONDA154 Recoil starter assy
(With steel plate ratchet)


004

名称: 154F老款启动器 NO: 154F12

 YAMAHA 154 Recoil starter assy
(With steel plate ratchet)


005

名称: 154F塑壳铁爪启动器 NO: 154F13

 Mitsubishi154 Recoil starter assy
(With steel plate ratchet)


006

名称: 154F塑壳塑爪启动器 NO: 154F14

 Mitsubishi154 Recoil starter assy
(With steel plate ratchet)


007

名称: 154F启动器 NO: 154F15

 LONCIN 154 Recoil starter assy
(With steel plate ratchet)


008

名称: 154F铁壳塑爪启动器 NO: 154F16

 154 Recoil starter assy
(With steel plate ratchet)


009

名称: 166棍爪启动器 NO: 166F14

 MZ175 EF2600 EF2700 166F 2KW
rod steel ratchet


010

名称: 168F斜纹铁爪启动器 NO: 168F1A

 168 Recoil starter assy
(With steel plate ratchet)


011

名称: 168F斜纹塑爪启动器 NO: 168F1B

 168 Recoil starter assy
(With plastic plate ratchet)


012

名称: 168F直纹塑爪启动器 NO: 168F1C

 168 Recoil starter assy
(With plastic plate ratchet)


013

名称: 168F直纹铁爪启动器 NO: 168F1D

 168 Recoil starter assy
(With steel plate ratchet)


014

名称: 168F六角绍通启动器 NO: 168F1E

 Shaotong168 Recoil starter assy
(With steel plate ratchet)


015

名称: 168F启动器 NO: 168F1F

Loncin168 Recoil starter assy
(With steel plate ratchet)



016

名称: 168F启动器 NO: 168F1G

Europe168 Recoil starter assy
(With steel plate ratchet)



017

名称: 168凯马启动器 NO: 168F1H

KAMA168 Recoil starter assy
(With steel plate ratchet)



018

名称: 168D型启动器 NO: 168F1K

168 Recoil starter assy
(With steel plate ratchet)



019

名称: BS163启动器 NO: 168F1I

Bs163 Recoil starter assy
(With steel plate ratchet)



020

名称: 168六角启动器 NO:168F1J

CQ168 Recoil starter assy
(With steel plate ratchet)



021

名称: ET950塑爪启动器 NO: T95010

950 Recoil starter assy
(With plastic plate ratchet)



022

名称: ET950铁爪启动器 NO: T95011

950 Recoil starter assy
(With steel plate ratchet)



023

名称: ET950启动器 NO: 95012

950 Recoil starter assy
(With plastic plate ratchet)



024

名称: 韩款950启动器 NO: T95013A

950 Recoil starter assy
(With plastic plate ratchet)



025

名称: MZ175换爪启动器 NO: 166F10

MZ175 EF2600 EF2700 166F 2KW Recoil
starter assy(With steel plate ratchet)



026

名称: MZ175塑爪启动器 NO: 166F11

MZ175 EF2600 EF2700 166F 2KW Recoil
starter assy(With plastic plate ratchet)



027

名称: MZ175新款启动器 NO: 166F12

MZ175 EF2600 EF2700 166F 2KW Recoil
starter assy(With plastic plate ratchet)



028

名称: MZ175反向启动器 NO: 166F13

MZ175 EF2600 EF2700 166F 2KW Recoil
starter assy(With plastic plate ratchet)



029

名称: MZ360启动器 NO: 185F10

MZ360 EF660 185F 5KW Recoil
starter assy(With plastic plate ratchet)



030

**名称: MZ360启动器** NO: 185F11

Mz360 EF660 185F 5KW Recoil starter assy(With plastic plate ratchet)



031

名称: MZ360换爪启动器 NO: 185F12

MZ360 EF660 185F 5KW Recoil (With steel plate ratchet)



032

名称: EY20铁爪低款启动器 NO: Y20D10

Ey20 Recoil starter assy (With plastic plate ratchet)



033

名称: EY20塑爪低款启动器 NO: Y20D11

EY20 Recoil starter assy (with plastic plate ratchet)



034

名称: EY20铁爪高款启动器 NO: Y20G10

EY20 Recoil starter assy (With steel plate ratchet)



035

名称: EY20塑爪高款启动器 NO: Y20G11

EY20 Recoil starter assy (with plastic plate ratchet)



036

名称: 2900铁爪启动器 NO: 2900F10

2900 Recoil starter assy (With steel plate ratchet)



037

名称: 2900塑爪启动器 NO: 2900F11

2900 Recoil starter assy (With plastic plate ratchet)



038

名称: 2900老款启动器 NO: 2900F12

2900 Recoil starter assy (With steel plate ratchet)



039

名称: EX13/17启动器 NO: X1310

EX12EX17 Recoil starter assy



040

名称: 173F直纹铁爪启动器 NO: 173F10

GX240 GX270 173F 177F Recoil starter assy(With steel plate ratchet)



041

名称: 173F六角款启动器 NO: 173F11

173 Recoil starter assy (With steel plate ratchet)



042

名称: 173F启动器 NO: 173F13

173 Recoil starter assy (With steel plate ratchet)



043

名称: 181F启动器 NO: 181F10

181 Recoil starter assy (With steel plate ratchet)



044

名称: 188F直纹铁爪启动器 NO: 188F10

GX340 GX390 GX160 GX620 188F 5KW Recoil starter assy(With steel plate ratchet)



045

名称: 188F启动器 NO: 188F11

188 Recoil starter assy
(With steel plate ratchet)



046

名称: 188F六角款启动器 NO: 188F12

188 Recoil starter assy
(With steel plate ratchet)



047

名称: 188直边铁爪启动器 NO: 188F13

188 Recoil starter assy
(With steel plate ratchet)



048

名称: EY15启动器 NO: Y1510

EY15 Recoil starter assy
(With steel plate ratchet)



049

名称: GX100启动器 NO: X10010

GX100 Recoil starter assy



050

名称: GX160棍爪启动器 NO: X16010

GX160 Recoil starter assy
(With steel rod ratchet)



051

名称: GX240棍爪启动器 NO: X24010

GX240 Recoil starter assy
(With steel rod ratchet)



052

名称: GX390棍爪启动器 NO: X39010

GX390 Recoil starter assy
(With steel rod ratchet)



053

名称: G100启动器 NO: G10010

G100 Recoil starter assy
(With steel plate ratchet)



054

名称: G200启动器 NO: G20010

G200 Recoil starter assy
(With steel plate ratchet)



055

名称: G300启动器 NO: G30010

G300 Recoil starter assy
(With steel plate ratchet)



056

名称: SK100启动器 NO: K10010

SK100 Recoil starter assy
(With steel plate ratchet)



057

名称: LEV150A启动器 NO: V15010

LEV150 Recoil starter assy
(With steel plate ratchet)



058

名称: LEV120启动器 NO: V12010

LEV120 Recoil starter assy
(With steel plate ratchet)



059

名称: GT240塑壳塑爪启动器 NO: T24010

GT240 Recoil starter assy



060



名称: GT600塑壳型爪启动器 NO: T60010

GT600 Recoil starter assy



061

名称: EX20启动器 NO: X2010

Ex17 EX20 Recoil starter assy



062

名称: EX27启动器 NO: X2011

Ex24 EX27 Recoil starter assy



063

名称: EY28启动器 NO: Y2810

Ey28 Recoil starter assy



064

名称: MT110铁爪启动器 NO: T11012

Mt110 Recoil starter assy
(chinese type)



065

名称: MT110启动器 NO: T11010

MT110Recoil starter assy
(original type)



066

名称: EH12/EY15启动器 NO: H12F10

EH12/EY15 (Chinese type)
Recoil starter assy



067

名称: 168F启动器 NO:1681L

168 Recoil starter assy
(With steel plate ratchet)



068

名称: 178LEC反向型爪启动器 NO: 178F12

178 Recoil starter assy
(With steel plate ratchet)



069

名称: 168F启动器 NO: 1681S

168 Recoil starter assy



070

名称: 168重庆款方型四孔启动器 NO: 168F1U

168 Recoil starter assy
(With steel plate ratchet)



071

名称: 168柴油机汽改柴铁爪启动器 NO: 168C10

168 Recoil starter assy
(With steel plate ratchet)



072

名称: 168柴油机汽改柴铁爪启动器 NO: 168C11

168 Recoil starter assy
(With steel plate ratchet)



073

名称: 170F普通柴油机款启动器 NO: 170F10

170 Recoil starter assy
(With steel plate ratchet)



074

名称: 178F普通柴油机款启动器 NO: 178F10

178 Diesel Recoil starter assy
(With steel plate ratchet)



075

名称: 186柴油机启动器 NO: 186F10

186 Recoil starter assy
(With steel plate ratchet)

076

名称: GXV160草坪机启动器 NO: V16010

GXV160 Recoil starter assy

077

名称: 1P60草坪机启动器 NO: P6010

1P60 Recoil starter assy

078

名称: 1P61塑壳启动器 NO: P6110

1P61 Recoil starter assy

079

名称: 1P70草坪机启动器 NO: P7010

1P70 Recoil starter assy

080

名称: 右1P70草坪机启动器 NO: P7012

1P70 Recoil starter assy

081

名称: 1P70草坪机启动器 NO: P7011

1P70 Recoil starter assy

082

名称: ZH启动器 NO: S80010

U820 Recoil starter assy
(With steel plate ratchet)

083

名称: ZH易启动器 NO: S80011

U820 Recoil starter assy
(With steel plastic ratchet)

084

名称: ZH启动器 NO: S80012

820 Recoil starter assy
(With steel plate ratchet)

085

名称: GCV190草坪机启动器 NO: V19010

GCV190 Recoil starter assy

086

名称: 九孔GCV160草坪机启动器 NO: V16010

GCV160 Recoil starter assy(9mm)

087

名称: 11孔GCV160草坪机启动器 NO: V16013

GCV160 Recoil starter assy
(11mm)

088

名称: GXV140草坪机启动器 NO: V14010

GXV140 Recoil starter assy

089

名称: BS1150启动器 NO: B115010

B&S 1150 Recoil starter assy

090



名称: BS1250启动器 NO: B125010

B&S 1250 Recoil starter assy



091

名称: BS1550启动器 NO: B155010

B&S 1550 Recoil starter assy



092

名称: BS1650启动器 NO: B165010

B&S 1650 Recoil starter assy



093

名称: BS1750启动器 NO: B175010

B&S 1750 Recoil starter assy



094

名称: BS2012启动器 NO: B210210

B&S 2102 Recoil starter assy



095

名称: BS3470启动器 NO: B347010

B&S 3470 Recoil starter assy



096

名称: FJ180V启动器 NO: 1H18010

FJ180V Recoil starter assy



097

名称: MV700ATV启动器 NO: A70010

MV700ATV Recoil starter assy



098

名称: 改进款ATV启动器 NO: A70011

A700ATV Recoil starter assy



099

名称: GCV190草坪机启动器 NO: V19011

GCV190 Recoil starter assy



100

名称: 扫雷机启动器 NO: K10011

SK100 Recoil starter assy



101

名称: 动力启动器 NO: K10012

SK100 Recoil starter assy



102

名称: GXV草坪机启动器 NO: V16011

GXV160 Recoil starter assy



103

名称: 170新普通柴油机大头双铁爪启动器 NO: 170F13

170 Recoil starter assy



104

名称: 铝壳BH22/500启动器 NO: M9410

WACKER WM80 Recoil starter assy



105



名称: TU26易启动器 NO: M1210

TU26 Recoil starter assy(Easy starter)



121

名称: TB26启动器 NO: M1310

TB26 33Recoil starter assy



122

名称: EC025钢丝启动器 NO: M1410

EC025SS Recoil starter assy



123

名称: EC025启动器 NO: M1510

EC025 Recoil starter assy



124

名称: EH025钢丝启动器 NO: M1610

EH025SS Recoil starter assy



125

名称: EH035启动器 NO: M1710

EH035 Recoil starter assy



126

名称: G23启动器 NO: M1810

G23 Recoil starter assy



127

名称: G26启动器 NO: M1910

G26 Recoil starter assy



128

名称: G35L/G45L启动器 NO: M2010

G35L/G45L Recoil starter assy



129

名称: G35L/G45L易启动器 NO: M2110

G35L/G45L Recoil starter assy



130

名称: GX35启动器 NO: M2210

GX35 Recoil starter assy



131

名称: GX35易启动器 NO: M2310

GX35 Recoil starter assy



132

名称: GX25启动器 NO: M2410

GX25 Recoil starter assy(Single starter)



133

名称: TH23启动器 NO: M2510

TH23 Recoil starter assy



134

名称: TH34启动器 NO: M2610

TH34 Recoil starter assy



135





名称: GXH50启动器

NO: H5010

GXH50 Recoil starter assy



151

名称: 139钢丝易启动器

NO: M4110

139SS Recoil starter assy(Easy starter)



152

名称: 139启动器

NO: M4210

139 Recoil starter assy(Single starter)



153

名称: 139F钢丝易启动器

NO: M4310

139FSS Recoil starter assy(Easy starter)
(With steel plate ratchet)



154

名称: T200启动器

NO: M4410

T200 Recoil starter assy



155

名称: T200启动器(原装款)

NO: M4510

T200 Recoil starter assy(original type)



156

名称: 18型一体启动器

NO: M4610

18 Recoil starter assy(Easy starter)



157

名称: 1E54FP启动器B一点红

NO: M4710

1E54FP Recoil starter assy(Easy starter)



158

名称: ST420启动器

NO: M4810

ST420 Recoil starter assy



159

名称: YJ34启动器

NO: M4910

YJ34 Recoil starter assy



160

名称: YJ34启动器

NO: M5010

YJ34 Recoil starter assy



161

名称: DC40-6启动器

NO: M5110

DC40-6 Recoil starter assy



162

名称: RBC411启动器

NO: M5210

RBC411 Recoil starter assy



163

名称: 40-6易启动器B

NO: M5310

40-6 Recoil starter assy



164

 
 
名称: 32一体启动器

NO: M5410

32 Recoil starter assy



165

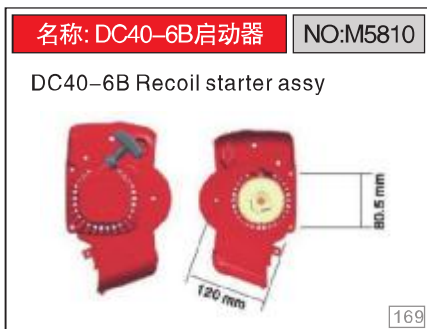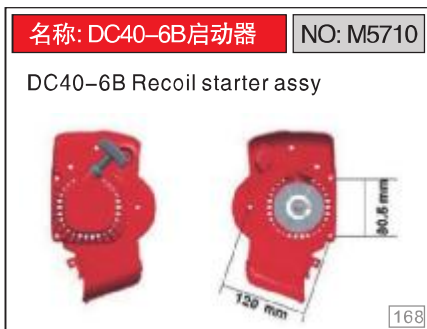

名称: 40-6C启动器B NO: M7010
40-6C Recoil starter assy



181

名称: M12110启动器 NO: M12110
M12110 Recoil starter assy



182

名称: BR340启动器 NO: R34010
BR340 Recoil starter assy



183

名称: 改进款BR340启动器 NO: R34011
BR340 Recoil starter assy



184

名称: 40启动器 NO: M7110
40 Recoil starter assy



185

名称: 1002启动器 NO: M7210
1002 Recoil starter assy



186

名称: 128R启动器 NO: 12810
128 Recoil starter assy



187

名称: 1003启动器 NO: M7310
1003 Recoil starter assy



188

名称: TL43钢启动器 (一点红) NO: M7410
TL43 Recoil starter assy



189

名称: BR600启动器 NO: 60010
Br600 Recoil starter assy



190

名称: 268油锯启动器 NO: M7510
HU268 Recoil starter assy



191

名称: 油锯启动器 NO: M7610
6200 Chain saw Recoil starter assy



192

名称: 281/288油锯启动器 NO: M7710
Chain saw Recoil starter assy



193

名称: 油锯启动器 NO: M7810
Chain saw Recoil starter assy



194

名称: 5800油锯启动器 NO: M7910
Chain saw Recoil starter assy



195





名称: FS100启动器 NO: S10010

FS100 Recoil starter assy



211

名称: MS660启动器 NO: S66010

MS660 Chain saw Recoil starter assy



212

名称: FS120启动器 NO: S12010

FS120 Recoil starter assy



213

名称: MS180启动器 NO: S18010

MS180 Chain saw Recoil starter assy



214

名称: MS381启动器 NO: S38110

MS381 Chain saw Recoil starter assy



215

名称: MS361启动器 NO: S36110

MS361 Chain saw Recoil starter assy



216

名称: MS360启动器 NO: S36010

MS360 Chain saw Recoil starter assy



217

名称: MS440启动器 NO: S44010

MS440 Chain saw Recoil starter assy



218

名称: MS380启动器 NO: S38010

MS380 Recoil starter assy



219

名称: MS070启动器 NO: S07010

MS070 Chain saw Recoil starter assy



220

名称: MS038启动器 NO: S03810

MS038 Recoil starter assy



221

名称: TS400启动器 NO: S40010

TS400 Recoil starter assy



222

名称: TS410启动器 NO: S41010

TS410 Recoil starter assy



223

名称: FS450启动器 NO: S45010

FS450 Recoil starter assy



224

名称: GX160新款启动器 NO: GX6011

GX160 Recoil starter assy
(with bent steel rod ratchet)



225



名称: 40-6C启动器B NO: M9510

40-6C Recoil starter assy



241

名称: 168扫雪机启动器 NO: 168F1P

M12110 Recoil starter assy



242

名称: 168柴油机铁片启动器 NO: 1681C10

168 Recoil starter assy



243

名称: BS140塑壳启动器 NO: 14013

Bs140 Recoil starter assy



244

名称: BS140 500E草坪机启动器 NO: B14010

B&S500 series 140cc
Recoil starter assy



245

名称: BS750扫雪机启动器 NO: B16311

Bs750 Recoil starter assy



246

名称: GCV140启动器 NO: V14014

GCV140 Recoil starter assy



247

名称: 1P61加强款草坪机启动器 NO: P6111

1P61 Recoil starter assy



248

名称: DY三孔塑壳草坪机启动器 NO: P6112

DY Recoil starter assy



249

名称: GT140草坪机启动器 NO: V14012

GT140 RECOIL STARTER ASSY



250

名称: SV200启动器 NO: SV200

Sv200 Recoil starter assy



251

名称: 5200启动器 NO: M9310

5200 Recoil starter assy



252

名称: HS81启动器 NO: M9610

HS81 RECOIL STARTER ASSY



253

名称: 460-506启动器 NO: M12110

460-506 Recoil starter assy



254

名称: HS550XP油锯启动器 NO: 9710

HS550XP Recoil starter assy



255





名称: 139B钢丝启动器

NO: M11510

139B SS STARTER



271

名称: 5800油锯双发易启动器

NO: M10210

5800 CHAIN SAW EASY STARTER



272

名称: 5800油锯双发反冲启动器

NO: M10310

5800 CHAIN SAW RECOILEASY STARTER



273

名称: 小松62启动器

NO: M10610



274

名称: 斯蒂尔660启动器

NO: S19310

MS181 Recoil starter assy



275

名称: 斯蒂尔211启动器

NO: S19210

STIHL 211 Recoil starter assy



276

名称: 137启动器

NO: M10410

HUS 137/142 Recoil starter Assy



277

名称: 帕特纳351启动器

NO: M10510

PARTNER 351 Recoil Starter Assy



278

名称: TU26超级启动器

NO: M10010

TU26 STARTER



279

名称: 168启动器

NO: 168F1R



280

名称: AG1735启动器

NO: M12210



281

名称: AH11 16启动器

NO: M12310



 
 
282

名称: AI13 09启动器

NO: M12410



283

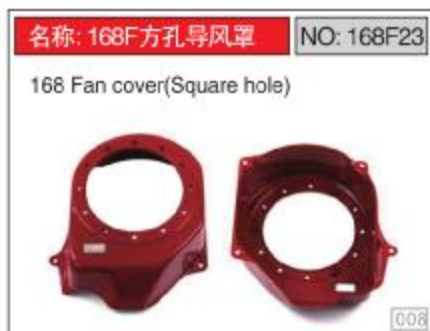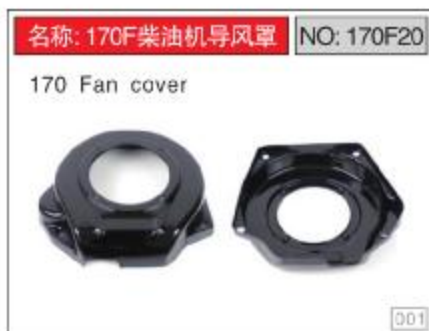



名称: 168汽改柴导风罩 NO: 168C20

168 Fan cover



016

名称: EY15导风罩 NO: Y15F20

EY15 Fan cover



017

名称: MZ175款导风罩 NO: Z175F20

MZ175 E12600 E12700 166F 2KW Fan cover



018

名称: MZ185导风罩 NO: Z185F20

MZ360 E16600 185F 5KW Fan cover



019

名称: EY20导风罩 NO: Y2020

EY20 Fan cover



020

名称: BS1150导风罩 NO: B115020

B & S1150 Fan cover



021

名称: 154风叶 NO: S1304

154 Fan blade



022

名称: 168风叶(白) NO: S1305

168 Fan blade



023

名称: 173风叶 NO: S1306

173 Fan blade



024

名称: 188风叶 NO: S1307

188 Fan blade



025

名称: 188电机后罩 NO: S1308

188 motor cover



026

名称: 168电机后罩 NO: S1309

168 motor cover



027

名称: 188导风罩有孔 NO: 188F20

188 Fan cover



028





名称: 154F塑爪启动鼓

NO: 154F31

Mitsubishi154 Sleeve
(With steel plate ratchet)



016

名称: 154F三菱铁爪启动鼓

NO: 154F30

Mitsubishi154 Sleeve
(With steel plate ratchet)



017

名称: MZ175塑爪启动鼓

NO: 166F31

MZ175 EF2600 EF2700 166F 2KW Sleeve
(With plastic plate ratchet)



018

名称: MZ175铁爪启动鼓

NO:166F30

MZ175 EF2600 EF2700 166F 2KW Sleeve
(With steel plate ratchet)



019

名称: MZ360塑爪启动鼓

NO: 185F30

MZ360 EF6600 185F 5KW Sleeve
(With plastic plate ratchet)



020

名称: EY20铁爪低款启动鼓

NO: Y20D30

EY20 Low type Sleeve
(With steel plate ratchet)



021

名称: GT240启动鼓

NO: T240F30

GT240 Sleeve



022

名称: EY20铁爪高款启动鼓

NO: Y20GF30

EY20 High type Sleeve
(With steel plate ratchet)



023

名称: EY15铁爪启动鼓

NO: Y15F30

EY15 Sleeve(With steel plate ratchet)



024

名称: GX100启动鼓

NO: X10030

GX100 Sleeve



025

名称: EY15原装款启动鼓

NO: Y15F31

EY15 Sleeve(Original type)



026

名称: EY28启动鼓

NO: Y28F30

EY28 Sleeve



027

名称: 1P60启动鼓

NO: P6030

1P60 Sleeve



028

名称: 168汽改柴油启动鼓

NO: 168C30

168 Sleeve



029

名称: EX13启动鼓

NO: X1330

EX13 Sleeve



030



NO:BP01
32拨盘(锌合金)
32 PULLEY(KIRSITE)NO:BP02
32易拨盘(锌合金)
32 EASY PULLEY(KIRSITE)NO:BP03
3G拨盘TU43(锌合金)
3G/TU43 PULLEY(KIRSITE)NO:BP04
40单爪拨盘(锌合金)
40 PULLEY(KIRSITE)NO:BP05
40双爪拨盘(锌合金)
40 PULLEY(KIRSITE)NO:BP06
36/40易拨盘(锌合金)
36/40 EASY PULLEY(KIRSITE)NO:BP07
36/40易拨盘(锌合金)
36/40 EASY PULLEY(KIRSITE)NO:BP08
18型易拨盘(锌合金)
18 EASY PULLEY(KIRSITE)NO:BP09
32圆拨盘(锌合金)
32 PULLEY(KIRSITE)NO:BP10
34易拨盘(锌合金)
34 EASY PULLEY(KIRSITE)NO:BP11
34拨盘(锌合金)
34 PULLEY(KIRSITE)NO:BP12
TU26/328易拨盘(锌合金)
TU26/328 EASY PULLEY(KIRSITE)NO:BP13
328易拨盘(锌合金)
328 EASY PULLEY(KIRSITE)NO:BP14
40-3Z易拨盘(锌合金)
40-3Z EASY PULLEY(KIRSITE)NO:BP15
TU26/328型爪易拨盘(锌合金)
TU26-/328 EASY PULLEY(PLASTIC)NO:BP16
328型爪拨盘(黑)
328 PULLEY(PLASTIC/BLACK)NO:BP17
36/40型爪易拨盘(黑)
36/40 PLASTIC PULLEY(BLACK)NO:BP18
36/40型爪易拨盘(黑)
36/40 PLASTIC PULLEY(BLACK)NO:BP19
34型爪易拨盘(黑)
34 PLASTIC EASY PULLEY(BLACK)NO:BP20
34型爪拨盘(黑)
34 PLASTIC PULLEY(BLACK)NO:BP21
34型爪易拨盘(白)
34 PLASTIC EASY PULLEY(WHITE)NO:BP22
TU26/34型爪易拨盘(白)
TU26/34 PLASTIC EASY PULLEY(WHITE)NO:BP23
36/40型爪易拨盘(白)
36/40 PLASTIC PULLEY(WHITE)NO:BP24
139铁拨盘
139 PULLEY(IRON)NO:BP25
40铁拨盘
40 PULLEY(IRON)NO:BP26
16型拨盘
16 PULLEYNO:BP27
GX35铁拨盘M6
GX35 PULLEY M6 (IRON)NO:BP28
GX35铁拨盘M8
GX35 PULLEY M8 (IRON)NO:BP29
40-3Z铁拨盘
40-3Z PULLEY(IRON)NO:BP30
GX35E风轮
GX35E WIND WHEELNO:BP31
GX35风轮
GX35 WIND WHEELNO:BP32
139F-B风轮
139F-B WIND WHEEL



NO:BP33
40-6鋼絲啟動器鐵拔盒
40-6 PULLEY (IRON)



 
NO:BP34
老40拔盒
40 PULLEY (OLD)



NO:BP35
40-3B拔盒(鋁)
40-3B PULLEY (AL)



NO:BP36
40-6鋁拔爪
40-6 PULLEY

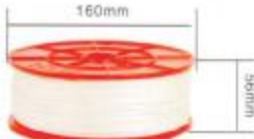

錦綸3.0X100
NO:LS-001



錦綸3.5X100
NO:LS-002



錦綸4.0X100
NO:LS-003



錦綸4.5X100
NO:LS-004



錦綸5.0X100
NO:LS-005



錦綸5.5X100
NO:LS-006



錦綸6.0X100
NO:LS-007



錦綸花紋3.0X100
NO:LS-008



滌綸3.0X100
NO:LS-009



滌綸3.5X100
NO:LS-010



滌綸4.0X100
NO:LS-011



滌綸4.5X100
NO:LS-012



滌綸5.0X100
NO:LS-013



滌綸5.5X100
NO:LS-014



滌綸6.0X100
NO:LS-015



滌綸花紋3.0X100
NO:LS-016



NO: PE01
Handle
名称: 拉手



NO: PE02
Handle
名称: 拉手



NO: PE03
Handle
名称: 拉手



NO: PE04
Handle
名称: 拉手



NO: PE05
Handle
名称: 拉手



NO: PE06
Handle
名称: 拉手



NO: PE07
Handle
名称: 拉手



NO: PE08
Handle
名称: 拉手



NO: PE09
Handle
名称: 拉手



NO: PE10
Handle
名称: 拉手



NO: PE11
Handle
名称: 拉手



NO: PE12
Handle
名称: 拉手



NO: PE13
Handle
名称: 拉手



NO: PE14
Handle
名称: 拉手



NO: PE15
Handle
名称: 拉手



NO: PE16
Handle
名称: 拉手



NO: PE17
Handle
名称: 拉手



NO: PA01
Handle
名称: 拉手



NO: PVC01
Handle
名称: 拉手



NO: PVC02
Handle
名称: 拉手



NO: PVC03
Handle
名称: 拉手



NO: PVC04
Handle
名称: 拉手



NO: PVC05
Handle
名称: 拉手



NO: PVC06
Handle
名称: 拉手



NO: PVC07
Handle
名称: 拉手



NO: PE18
Handle
名称: 拉手



NO: PE19
Handle
名称: 拉手



NO: PE20
Handle
名称: 拉手



NO: PE21
Handle
名称: 拉手



NO: PE22
Handle
名称: 拉手



NO: PE23
Handle
名称: 拉手



NO: PE24
Handle
名称: 拉手



NO: PE25
Handle
名称: 拉手



NO: PE26
Handle
名称: 拉手



NO: PE27
Handle
名称: 拉手



NO: PE28
Handle
名称: 拉手



NO: M4010-1
TU26 DOUBLE CONNECTOR
名称: TU26 双发连接座



NO: M4010-2
32F DOUBLE CONNECTOR
名称: 32F 双发连接座



NO: M4010-3
33F/328 DOUBLE CONNECTOR
名称: 32F/328 双发连接座



NO: M4010-4
34F DOUBLE CONNECTOR
名称: 34F 双发连接座



NO: M4010-5
40-5F DOUBLE CONNECTOR
名称: 40-5F 双发连接座



NO: M4010-6
139 DOUBLE CONNECTOR
名称: 139 双发连接座



NO:LT01
工作头A
WORKING HEAD A



NO:LT02
工作头B
WORKING HEAD B



NO:LT03
工作头C
WORKING HEAD C



NO:LT04
工作头D
WORKING HEAD D



NO:LT05
工作头E
WORKING HEAD E



NO:LT06
工作头(90°)
WORKING HEAD F



NO:LT07
工作头G(小松)
WORKING HEAD G



NO:LT08
工作头H
WORKING HEAD H



NO:LT09
工作头I
WORKING HEAD I



NO:LT10
工作头J
WORKING HEAD J



NO:LT11
工作头K
WORKING HEAD K



NO:LT12
工作头L
WORKING HEAD L



NO:LT13
工作头M
WORKING HEAD M



NO:LT14
工作头(斯蒂尔120)
WORKING HEAD (ST120)



NO:LT15
斯蒂尔(固定座)
STIHL FIXING SEAT



NO:LT16
斯蒂尔(固定座)
STIHL FIXING SEAT



NO:LT17
连接套A
CONNECTING PIPE A



NO:LT18
连接套B
CONNECTING PIPE B



NO:LT19
连接套C
CONNECTING PIPE C



NO:LT20
连接套D
CONNECTING PIPE D



NO:LT21
连接套E
CONNECTING PIPE E



NO:LT22
连接套F
CONNECTING PIPE F



NO:LT23
连接套G
CONNECTING PIPE G



NO:LT24
固定座A(塑料)
FIXING SEAT A



NO:LT25
固定座B
FIXING SEAT B



NO:LT26
固定座C
FIXING SEAT C



NO:LT27
固定座D
FIXING SEAT D



NO:LT28
连接套A(采茶机)
CONNECTOR A(TEA HARVESTER)



NO:LT29
连接套B(割草机)
CONNECTOR B



NO:LT30
连接套C
CONNECTOR C



NO:LT31
连接套D
CONNECTOR D



NO:LT32
连接套E
CONNECTOR E



NO:LT33
连接套F
CONNECTOR F



NO:LT34
连接套G
CONNECTOR G



NO:LT35
塑料吸水泵
PLASTIC WATER SUCTION PUMP



NO:LT36
铝吸水泵
ALUMINUM WATER SUCTION PUMP



NO:LT37
弯管工作头
WORKING HEAD



NO:HHS-01



NO:HHS-02



NO:HHS-03



NO:HHS-04



NO:HHS-05



NO:HHS-06



NO:HHS-07



NO:HHS-08



NO:HHS-09



NO:HHS-10



NO:HHS-11



NO:HHS-12



NO:HHS-13



NO:HHS-01



NO:HHS-01



NO:HHS-01



NO:HHS-01



NO:HHS-01



启动器总成
starter assy
NO:950-001



面板
Front panel
NO:950-002



消声器0.7kg
Muffler 0.7kg
NO:950-003



消声器0.9kg
Muffler 0.9kg
NO:950-004



消声器1.1kg
Muffler 1.1kg
NO:950-005



曲轴箱(右)
Right Crank case
NO:950-006



曲轴箱(左)
Left Crank case
NO:950-007



电机端盖6203
Frame rear 6203
NO:950-008



电机端盖6202
Frame rear 6202
NO:950-009



缸套(黑色)
Cylinder(black)
NO:950-010



缸套(灰色)
CYLINDER(gray)
NO:950-011



曲轴
Crankshaft
NO:950-012



缸头
Cylinder head
NO:950-013



缸体罩
Cover cylinder
NO:950-014



活塞
Piston
NO:950-015



活塞环
Piston ring
NO:950-016



活塞销
Piston pin
NO:950-017



活塞销卡簧
Clip(Piston pin)
NO:950-018



进气阀门
inlet valve
NO:950-019



油箱油标
Fuel meter
NO:950-020



 
油箱盖
Fuel tank cap
NO:950-021



内螺纹油开关
Fuel tank (inner)
NO:950-022



油开关(小)
Fuel tank (small)
NO:950-023



滤网组件
Fuel filter
NO:950-024



油箱
Fuel tank
NO:950-025



防震脚
Shockproof foot
NO:950-026



化油器
Carbretor(AL)
NO:950-027



化油器(半铝半锌)
Carbretor(AL-Zn)
NO:950-028



化油器(锌)
Carbretor(Zn)
NO:950-029



电容器(8UF-24UF)
Carbretor(8UF-24UF)
NO:950-030



电容器(12UF-50UF)
Carbretor(12UF-50UF)
NO:950-031



插头
Plug
NO:950-032



插头
Plug
NO:950-033



插头
Plug
NO:950-034



日式插头
Japanese Plug
NO:950-035



日式插座
Japanese receptacle
NO:950-036



歐式插头 (短)
European plug(short)
NO:950-037



歐式插头
European plug
NO:950-038



歐式插座 (蓝色)
Japanese receptacle (blue)
NO:950-038



歐式插座 (红色)
Japanese receptacle (red)
NO:950-040



多功能插座
Multi-receptacle
NO:950-041



普通插头
Universal plug
NO:950-042



过流保护器
Overcurrent protector
NO:950-043



开关
Switch
NO:950-044



过流保护器 (小头)
Overcurrent protector(small head)
NO:950-050



整流器2510
Rectifier2510
NO:950-051



整流器3510
Rectifier3510
NO:950-052



T型插座
T Receptacle
NO:950-053



V型插座
V Receptacle
NO:950-054



直流线 (V型)
Battery charger wire (V)
NO:950-055



调整拉杆
Pburod adjusting
NO:950-061



减压弹簧
Decompression spring
NO:950-062



调整修理包
Governor repair kit
NO:950-063



连杆 (金黄色)
Connecting rod(golden)
NO:950-064



连杆 (黑色)
Connecting rod(black)
NO:950-065



滚针轴承 (小)
Needle bearing(small)
NO:950-071



滚针轴承 (大)
Needle bearing(big)
NO:950-072



连杆销子 (10)
Connecting rod dowel (10)
NO:950-073



深沟球轴承6004
Deep groove ball bearing 6004
NO:950-074



轴承6203
Bearing 6203
NO:950-075



定子
Staror
NO:950-076



转子
Rotor
NO:950-077



法兰螺栓 M6x20
Bolt M6x20
NO:950-078



法兰螺栓 M6x10
Bolt M6x10
NO:950-079



法兰螺栓 M6x45
Bolt M6x45
NO:950-080



法兰螺栓 M6x55
Bolt M6x55
NO:950-081



双头螺栓 M6x113
Bolt M6x113
NO:950-082



双头螺栓 M6x73
Bolt M6x73
NO:950-083



十字螺栓 M6x25
Bolt M6x25
NO:950-084



十字螺栓 M4x10
Bolt M4x10
NO:950-085



法兰螺栓 M6x80
Bolt M6x80
NO:950-086



十字大扁头螺丝 M6x16
Screw M6x16
NO:950-087



十字螺丝 M4x13
Screw M4x13
NO:950-088



法兰螺栓 M6x16
Bolt M6x16
NO:950-089



法兰螺栓 M6x12
Bolt M6x12
NO:950-090



法兰螺栓 M6x100
Bolt M6x100
NO:950-091



三组合螺丝 M3x8
Bolt M3x8
NO:950-092



气缸螺母 M6x18
Bolt M6x18
NO:950-093



法兰螺母 M6
Bolt M6
NO:950-094



法兰螺母 M10
Bolt M10
NO:950-095



直流线 (T型)
Battery charger wire(T)
NO:950-096



垫片 (缸体)
Gasket(cylinder bottom)
NO:950-097



垫片 (化油器入口)
Gasket(carburetor inlet)
NO:950-098



垫片 (化油器出口)
Gasket(carburetor outlet)
NO:950-099



垫片 (密封)
Gasket/Seal
NO:950-100



垫片 (缸头)
Gasket(cylinder head)
NO:950-101



消声器垫片
Gasket(muffler)
NO:950-102



全套垫片
Gasket set
NO:950-103



调速拉簧
Speed governing spring
NO:950-104



调速连杆拉簧
Adjusting spring
NO:950-105



十字螺丝 M6x30
Screw M6x30
NO:950-106



离心片架
Stand
NO:950-107



滑环
Slip ring
NO:950-108



调速叉
Speed regulating fork
NO:950-109



调速杆
Shifter
NO:950-110



火花塞
Spark plug
NO:950-111



飞轮 (铝)
Fly wheel(Al)
NO:950-112



飞轮 (塑料)
Fly wheel(plastic)
NO:950-113



调速臂
adjusting arm
NO:950-114



盖盘
Drive plate
NO:950-115



卷轮
Drum wheel
NO:950-116



夹簧
Clip spring
NO:950-117



拉绳
Starter rope
NO:950-118



挡块
Bearing plate(black)
NO:950-119



卷轮 (米黄)
Drum wheel(cream)
NO:950-120



挡块 (米色)
Bearing plate(cream)
NO:950-121



卷簧
Pawling spring starter
NO:950-122



拉手
Handle starter
NO:950-123



拉绳 (一卷)
Starter rope(roll)
NO:950-124



工具包
Tool bag
NO:950-125



卡圈
Circlip
NO:950-126



指示灯
Indicator
NO:950-127



电压表
Voltmeter
NO:950-128



二级管 6A
Diode 6A
NO:950-129



电机风叶
Armature fan
NO:950-130



高压包
Ignition coil
NO:950-131



点火器
Ignitor
NO:950-132



磁电机
Magneto
NO:950-133



曲轴油封 f20
Oil seal f20
NO:950-134



曲轴油封 f6
Oil seal f6
NO:950-135



手柄
Handle
NO:950-136



启动器总成
Starter assy
NO:950-137



油箱总成
Fuel tank assy
NO:950-138



油箱盖
Fuel tank cap
NO:950-139



消声器
Muffler
NO:950-140



油开关
Fuel tap
NO:950-141



手柄螺丝
Screw
NO:950-142



油箱油标
Fuel meter
NO:950-143



手柄
Handle
NO:950-144



化油器
Carburetor
NO:950-145



面板
Front panel
NO:950-146



空滤棉
Air cleaner sponge
NO:950-147



启动器总成(塑)
Starter assy(plastic)
NO:168-001



启动器总成(铁)
Starter assy(iron)
NO:168-002



2900启动器总成(铁)
2900 Starter assy(iron)
NO:168-003



2900启动器总成(塑)
2900 Starter assy(plastic)
NO:168-004



蜗壳
Fan case
NO:168-005



6.5HP箱体
6.5HP Crank case
NO:168-006



5.5HP箱体
5.5HP Crank case
NO:168-007



箱盖(低)
Crankcase cover(low)
NO:168-008



气缸盖罩总成
Cylinder head cover assy
NO:168-009



气缸头
Cylinder head
NO:168-010



气缸头总成
Cylinder head assy
NO:168-011



气门弹簧
Valve spring
NO:168-012



进排气门
Intake & exhaust valve
NO:168-013



进排气门(白色)
Intake & exhaust valve(white)
NO:168-014



进排气门弹簧座
Retainer In & Ex valve spring Plate
NO:168-015



排气门护帽
Exhaust valve cap
NO:168-016



推杆支架
Plate push rod guide
NO:168-017



推杆支架(尼龙)
Plate push rod guide(nylon)
NO:168-018



摇臂总成
Rocker arm assy
NO:168-019



机油报警器
Oil alert
NO:168-020



机油分离器
Oil separator
NO:168-021



高压包
Ignition coil
NO:168-022



连杆总成
Connecting rod assy
NO:168-023



调速齿轮总成
Governor gear set
NO:168-024



调速轴
Governor gear sha
NO:168-025



火花塞
Spark plug
NO:168-026



箱盖垫片
Gasket(crank case cover)
NO:168-027



气缸盖罩垫片
Gasket(cylinder cover)
NO:168-028



气缸垫片
Gasket(cylinder)
NO:168-029



空滤器纸垫片
Gasket(air filter)
NO:168-030



空滤器橡胶铁垫片
Rubber gasket(air filter)
NO:168-031



化油器连接垫片
Gasket(carburetor joint)
NO:168-032



消声器垫片
Gasket(muffler)
NO:168-033



化油器出口垫片
Gasket(carburetor outlet)
NO:168-034



全套垫片
Gasket set
NO:168-035



化油器隔热板
Insulator carburetor
NO:168-036



高压帽
Ignition coil cap
NO:168-037



呼吸气管
Ventilator
NO:168-038



启动鼓(铁)
Starter pulley(iron)
NO:168-039



启动鼓(塑)
Starter pulley(plastic)
NO:168-040



机油标尺
Oil dipstick
NO:168-041



活塞5.5HP
Piston 5.5HP
NO:168-042



活塞6.5HP
Piston 6.5HP
NO:168-043



活塞销
Piston pin
NO:168-044



活塞环
Piston ring
NO:168-045



活塞销卡簧
Clip(piston pin)
NO:168-046



化油器
Carburetor
NO:168-047



调压器(铝)
AVR(AL)
NO:168-048



调压器(塑壳)
AVR(Plastic)
NO:168-049



调压器(长方形)
AVR(rectangle)
NO:168-050



电容42UF
Capacitor 42UF
NO:168-051



电容24UF
Capacitor 24UF
NO:168-052



开关(船型)
Switch
NO:168-053



美式插头
American plug
NO:168-054



美式插座
American receptacle
NO:168-055



断路器
Circuit breaker
NO:168-056



断路器
Circuit breaker
NO:168-057



电门锁
Lock & key
NO:168-058



熄火开关
Stop switch
NO:168-059



油开关(带滤网)
With strainer
NO:168-060



油开关
Fuel tap(outer)
NO:168-061



内螺纹油开关
Fuel tap(outer)
NO:168-062



继电器
Relay
NO:168-063



马达带继电器
Motor with relay
NO:168-064



曲轴5.5HP(23轴)
Crankshaft 5.5HP 23
NO:168-065



曲轴5.5HP(19轴)
Crankshaft 5.5HP 19
NO:168-066



曲轴6.5HP(23轴)
Crankshaft 6.5HP 23
NO:168-067



曲轴6.5HP(19轴)
Crankshaft 6.5HP 19
NO:168-068



调速驱动齿轮
Driving gear
NO:168-069



正时齿轮
Timing gear
NO:168-070



凸轮轴总成(铁)
Camshaft assy(iron)
NO:168-071



凸轮轴(尼龙)
Camshaft assy(nylon)
NO:168-072



电瓶12V12AH
Storage battery 12V12AH
NO:168-073



电瓶12V12AH
Storage battery 12V12AH
NO:168-074



磁飞轮(电动)
Fly wheel(electric)
NO:168-075



磁飞轮
Fly wheel
NO:168-076



碳刷(米黄)
Carbon brush(cream)
NO:168-077



碳刷(黑)
Carbon brush(black)
NO:168-078



曲轴油封
Oil seal
NO:168-079



进气门导管油封
Oil seal(intake valve)
NO:168-080



电机支架(有刷)
Armature seat with brush
NO:168-081



电机支架(无刷)
Armature seat without brush
NO:168-082



电机支架5203轴承孔
Armature seat 6203 bearing
NO:168-083



箱盖(高)
Crank case cover(high)
NO:168-084



轴承6204
Bearing 6204
NO:168-085



钢垫 6x15x0.5
Gasket 6x15x0.5
NO:168-086



加大垫片 6x25
Gasket 6x25
NO:168-087



摆杆
Governor arm shaft
NO:168-088



调速座
Governor seat
NO:168-089



飞轮边罩
Fly wheel side cover
NO:168-090



号风罩
Wind scooper
NO:168-091



调速臂
speed adjusting arm
NO:168-092



压线板
Pressing plate
NO:168-093



电启动边罩
Side cover(electric starter)
NO:168-094



冷却风扇(黑)
Cooling fan(black)
NO:168-095



冷却风扇(白)
Cooling fan(white)
NO:168-096



滑环
Slip ring
NO:168-097



转子
Rotor
NO:168-098



定子
Stator
NO:168-099



法兰螺母 M6
Nut M6
NO:168-100



法兰螺母 M8
Nut M8
NO:168-101



法兰螺母 M14
Nut M14
NO:168-102



法兰螺栓 8x16M
Bolt 8x16M
NO:168-103



法兰螺栓 8x10M
Bolt 8x10M
NO:168-104



法兰螺栓 6x12M
Bolt 6x12M
NO:168-105



法兰螺栓 6x125M
Bolt 6x125M
NO:168-106



法兰螺栓 6x16M
Bolt 6x16M
NO:168-107



法兰螺栓 5x12M
Bolt 5x12M
NO:168-108



法兰螺栓 6x8M
Bolt 6x8M
NO:168-109



十字沉头 5x10M
Screw 5x10M
NO:168-110



十字螺丝 5x16M
Screw 5x16M
NO:168-111



法兰螺栓 6x16M
Bolt 6x16M
NO:168-112



法兰螺栓 6x16M
Bolt 6x16M
NO:168-113



双头螺丝 6x23M
Screw 6x23M
NO:168-114



双头螺丝 6x110M
Screw 6x110M
NO:168-115



方头螺丝 6x12M
Screw 6x12M
NO:168-116



法兰螺栓 8x205M
Bolt 8x205M
NO:168-117



法兰螺栓 8x55M
Bolt 8x55M
NO:168-118



拉杆弹簧
Spring(pull rod)
NO:168-119

调速器拉杆
Governor pull rod
NO:168-120



轴承6205
Bearing 6205
NO:168-121



空滤器
Air filter
NO:168-122



空滤器海绵
Air filter sponge
NO:168-123



消声器
Muffler
NO:168-124



消声器罩
Muffler cover
NO:168-125



2900消声器罩
2900 Muffler cover
NO:168-126



2900消声器
2900 Muffler
NO:168-127



油箱总成
Fuel tank assy
NO:168-128



油箱油标
Fuel meter
NO:168-129



油箱盖
Fuel tank cap
NO:168-130



电压表
Voltmeter
NO:168-131



防震脚
Shockproof foot
NO:168-132



防震脚(中心脚)
Shockproof foot(center)
NO:168-133



电机机架脚垫
Foot gasket(Armature seat)
NO:168-134



油箱棉胶垫
Rubber gasket(fuel tank)
NO:168-135



定位销 10x16
Locating dowel 10x16
NO:168-136



定位销 8x14
Locating dowel 8x14
NO:168-137



卷轮(铁)
Drum wheel(iron)
NO:168-138



卷轮(塑)
Drum wheel(plastic)
NO:168-139



挡块(铁)
Bearing plate(iron)
NO:168-140



卷簧
Pawling spring starter
NO:168-141



拉绳
Starter Rope
NO:168-142



盖盘(铁)
Drive plate(iron)
NO:168-143



盖盘(塑料)
Drive plate(plastic)
NO:168-144



拉盘配件(塑料)
Starter repair kit(plastic)
NO:168-145



拉盘配件(铁)
Starter repair kit(iron)
NO:168-146



接线柱
Terminal
NO:168-147



调速弹簧
Spring(governor)
NO:168-148



油箱
Fuel tank
NO:168-149



滤网
Screens
NO:168-150



气缸头总成
Cylinder head assy
NO:186-001



气缸罩
Cylinder head cover
NO:186-002



箱体
Crank case
NO:186-003



箱盖(高)
Crank case cover(high)
NO:186-004



电机支架
Armature seat
NO:186-005



进气管
Air intake tube
NO:186-006



上支架
Up-bracket
NO:186-007



前端盖
Front cover
NO:186-008



调压器(半月形 单相)
AVR(woodroff single-phase)
NO:186-009



调压器(半月形 三相)
AVR(woodroff three-phase)
NO:186-010



调压器(四方形 三相)
AVR(square three-phase)
NO:186-011



调压器(四方形 单相)
AVR(square single-phase)
NO:186-012



稳压器
Voltage regulator
NO:186-013



电容42UF
Capacitor 42UF
NO:186-014



电门锁
Lock & key
NO:186-015



调速齿轮总成
Governor gear set
NO:186-016



滑套
Governor slider
NO:186-017



启动器总成
Starter assy
NO:186-018



扇壳
Fan case
NO:186-019



马达带继电器
Motor with relay
NO:186-020



磁力开关
Magnetic switch
NO:186-021



飞轮发电机
Fly wheel generator
NO:186-022



飞轮发电机单线圈
Coil
NO:186-023



活塞
Piston
NO:186-024



活塞销
Piston pin
NO:186-025



卡簧
Clip(piston pin)
NO:186-026



活塞环
Piston ring
NO:186-027



摇臂总成
Rocker arm assy
NO:186-028



进排气门
Intake & exhaust valve
NO:186-029



气门弹簧座
Valve spring retainer
NO:186-030



进排气门弹簧座下座
Valve spring retainer(bottom)
NO:186-031



气门锁片
Valve cotter
NO:186-032



气门弹簧
Valve spring
NO:186-033



护帽
Protect cap
NO:186-034



低噪音柴油滤清器总成
Diesel filter assy(low noise)
NO:186-035



柴油滤芯(开架)
Diesel filter element(open shelf)
NO:186-036



柴油滤芯器总成
Diesel filter assy
NO:186-037



滤芯(静音)
Diesel filter assy(silence)
NO:186-038



面板
Front panel
NO:186-039



断路器
Circuit breaker
NO:186-040



拉绳
Starter string
NO:186-041



波纹管
Bellows
NO:186-042



空滤器
Air cleaner
NO:186-043



空滤器(静音)
Air cleaner(silence)
NO:186-044



空滤器滤芯
Air cleaner element
NO:186-045



消声器(开架)
Muffler(open shelf)
NO:186-046



消声器(静音)
Muffler(silence)
NO:186-047



消声器(静音)
Muffler(silence)
NO:186-048



曲轴
Crankshaft
NO:186-049



正时齿轮
Timing gear
NO:186-050



调速驱动齿轮
Driving gear
NO:186-051



槽型键
Rectangle key
NO:186-052



喷油泵(电动)
Fuel injector pump(electric)
NO:186-053



喷油泵(手动)
Fuel injector pump(manual)
NO:186-054



喷油器总成(短)
Oil injector assy(short)
NO:186-055



喷油器总成(长)
Oil injector assy(long)
NO:186-056



油嘴偶件(长)
Oil nozzle(long)
NO:186-057



油嘴偶件(短)
Oil nozzle(short)
NO:186-058



机油泵总成
Oil pump assy
NO:186-059



机油传感器
Oil sensor
NO:186-060



平衡轴
Balance shaft
NO:186-061



凸轮轴总成
Camshaft assy
NO:186-062



机油滤网
Oil strainer
NO:186-063



主轴瓦
Main bearing
NO:186-064



连杆瓦
Connecting rod bearing
NO:186-065



挺柱
Valve lifter
NO:186-066



推杆
Push rod
NO:186-067



连杆
Connecting rod
NO:186-068



油开关
Fuel tap
NO:186-069



油门支架
Bracket(accelerograph)
NO:186-070



启动鼓
Starter pulley
NO:186-071



电瓶12V20Ah
Storage Battery 12V20Ah
NO:186-072



电压表
Voltmeter
NO:186-073



磁飞轮
Fly wheel
NO:186-074



滚针轴承
Needle bearing
NO:186-075



防震脚
Shockproof foot
NO:186-076



机油标尺
Oil dipstick
NO:186-077



深沟球轴承
Ball bearing
NO:186-078



油泵挺柱
Oil pump lifter
NO:186-079



高压油管
High pressure oil pipe
NO:186-080



稳压器支架
Bracket(voltage regulator)
NO:186-081



外减压手柄
Decompression portable
NO:186-082



拨叉总成
Shift fork assy
NO:186-083



油箱支架
Fuel tank support
NO:186-084



导风板
Wind scooper
NO:186-085



油封
Oil seal
NO:186-086



垫片
Gasket
NO:186-087



风扇罩密封条
Seal strip(fan case)
NO:186-088



O型圈
Type-O ring
NO:186-089



油嘴压板
Press plate(oil nozzle)
NO:186-090



滤网压板
Strainer press plate
NO:186-091



机油泵压板
Press plate(oil pump)
NO:186-092



放油螺塞垫片
Gasket
NO:186-093



油泵塞孔压板
Press plate
NO:186-094



油泵孔垫片
Gasket(oil pump hole)
NO:186-095



垫片
Gasket
NO:186-096



轴承压板
Press plate(Bearing)
NO:186-097



垫片
Gasket
NO:186-098



进气管垫片
Air intake gasket
NO:186-099



油泵垫(0.30)
Gasket(0.30)
NO:186-100



垫片
Gasket
NO:186-101



垫片
Gasket
NO:186-102



垫片
Gasket
NO:186-103



垫片
Gasket
NO:186-104



全套垫片
Gasket set
NO:186-105



减压弹簧
Decompression spring
NO:186-106



回位弹簧
Back spring
NO:186-107



回位弹簧2
Back spring 2
NO:186-108



回位弹簧3
Back spring 3
NO:186-109



调速弹簧
Speed adjusting spring
NO:186-110



法兰面防松螺母 M6
Nut M6
NO:186-111



油门调节螺栓
Bolt
NO:186-112



摇臂固定螺丝
Screws(fixed rocker arm)
NO:186-113



摇臂调整螺丝
Screws(adjust rocker arm)
NO:186-114



3转2出水口
Water outlet
NO: CX001



出水口
Water outlet
NO: CX002



皮带轮
Belt roller
NO: CX003



Pump case
NO: CX004



Crankcase cover(low)
NO: CX005



Water in&Ex joint(AL)
NO: CX006



扳手
Spanner
NO: CX007



水泵化油器
Carburetor(water pump)
NO: CX008



化油器带油杯
Carburetor with fuel cup
NO: CX009



Stop switch (single)
NO: CX010



Stop switch(double)
NO: CX011



曲轴(键槽)
Crankshaft(rectangle)
NO: CX012



曲轴(螺纹)
Crankshaft(whorl)
NO: CX013



YP20水封
Water seal(YP20)
NO: CX014



ET1500 Water seal
NO: CX015



YP30 Water seal
NO: CX016



水泵2'3'4'
Pump hose
NO: CX017



大密封圈
Big seal ring
NO: CX018



进出水口密封圈
Seal ring(inlet & outlet)
NO: CX019



Gasket(water outlet)
NO: CX020



Gasket(water inlet)
NO: CX021



动力空滤器
Engine air filter
NO: CX022



水泵消声器(黑)
Muffler(black)
NO: CX023



水泵消声器(镀铬)
Pump muffler(Cr)
NO: CX024



Impeller
NO: CX025



Swirling shell
NO: CX026



进出水口接头
Joint(water inlet & outlet)
NO: CX027



扳手(塑)
Spanner(plastic)
NO: CX028



堵塞
Blocker
NO: CX029



进水滤网
Water inlet strainer
NO: CX030



水泵调速座
Governor seat(pump)
NO: CX031



水泵油箱总成
Fuel tank assy
NO: CX032



水泵油箱盖(铁)
Fuel tank cover(iron)
NO: CX033



水泵油箱盖(塑料)
Fuel tank cover(plastic)
NO: CX034



pump strainer
NO: CX035



Fuel control valve
NO: CX036



启动器总成(铁)
Starter assy(iron)
NO: CX037



启动器总成(塑)
Starter assy(plastic)
NO: CX038



 
泵体座
Pump block seat
NO: CX039



water inlet
NO: CX040



clip NO: CX041

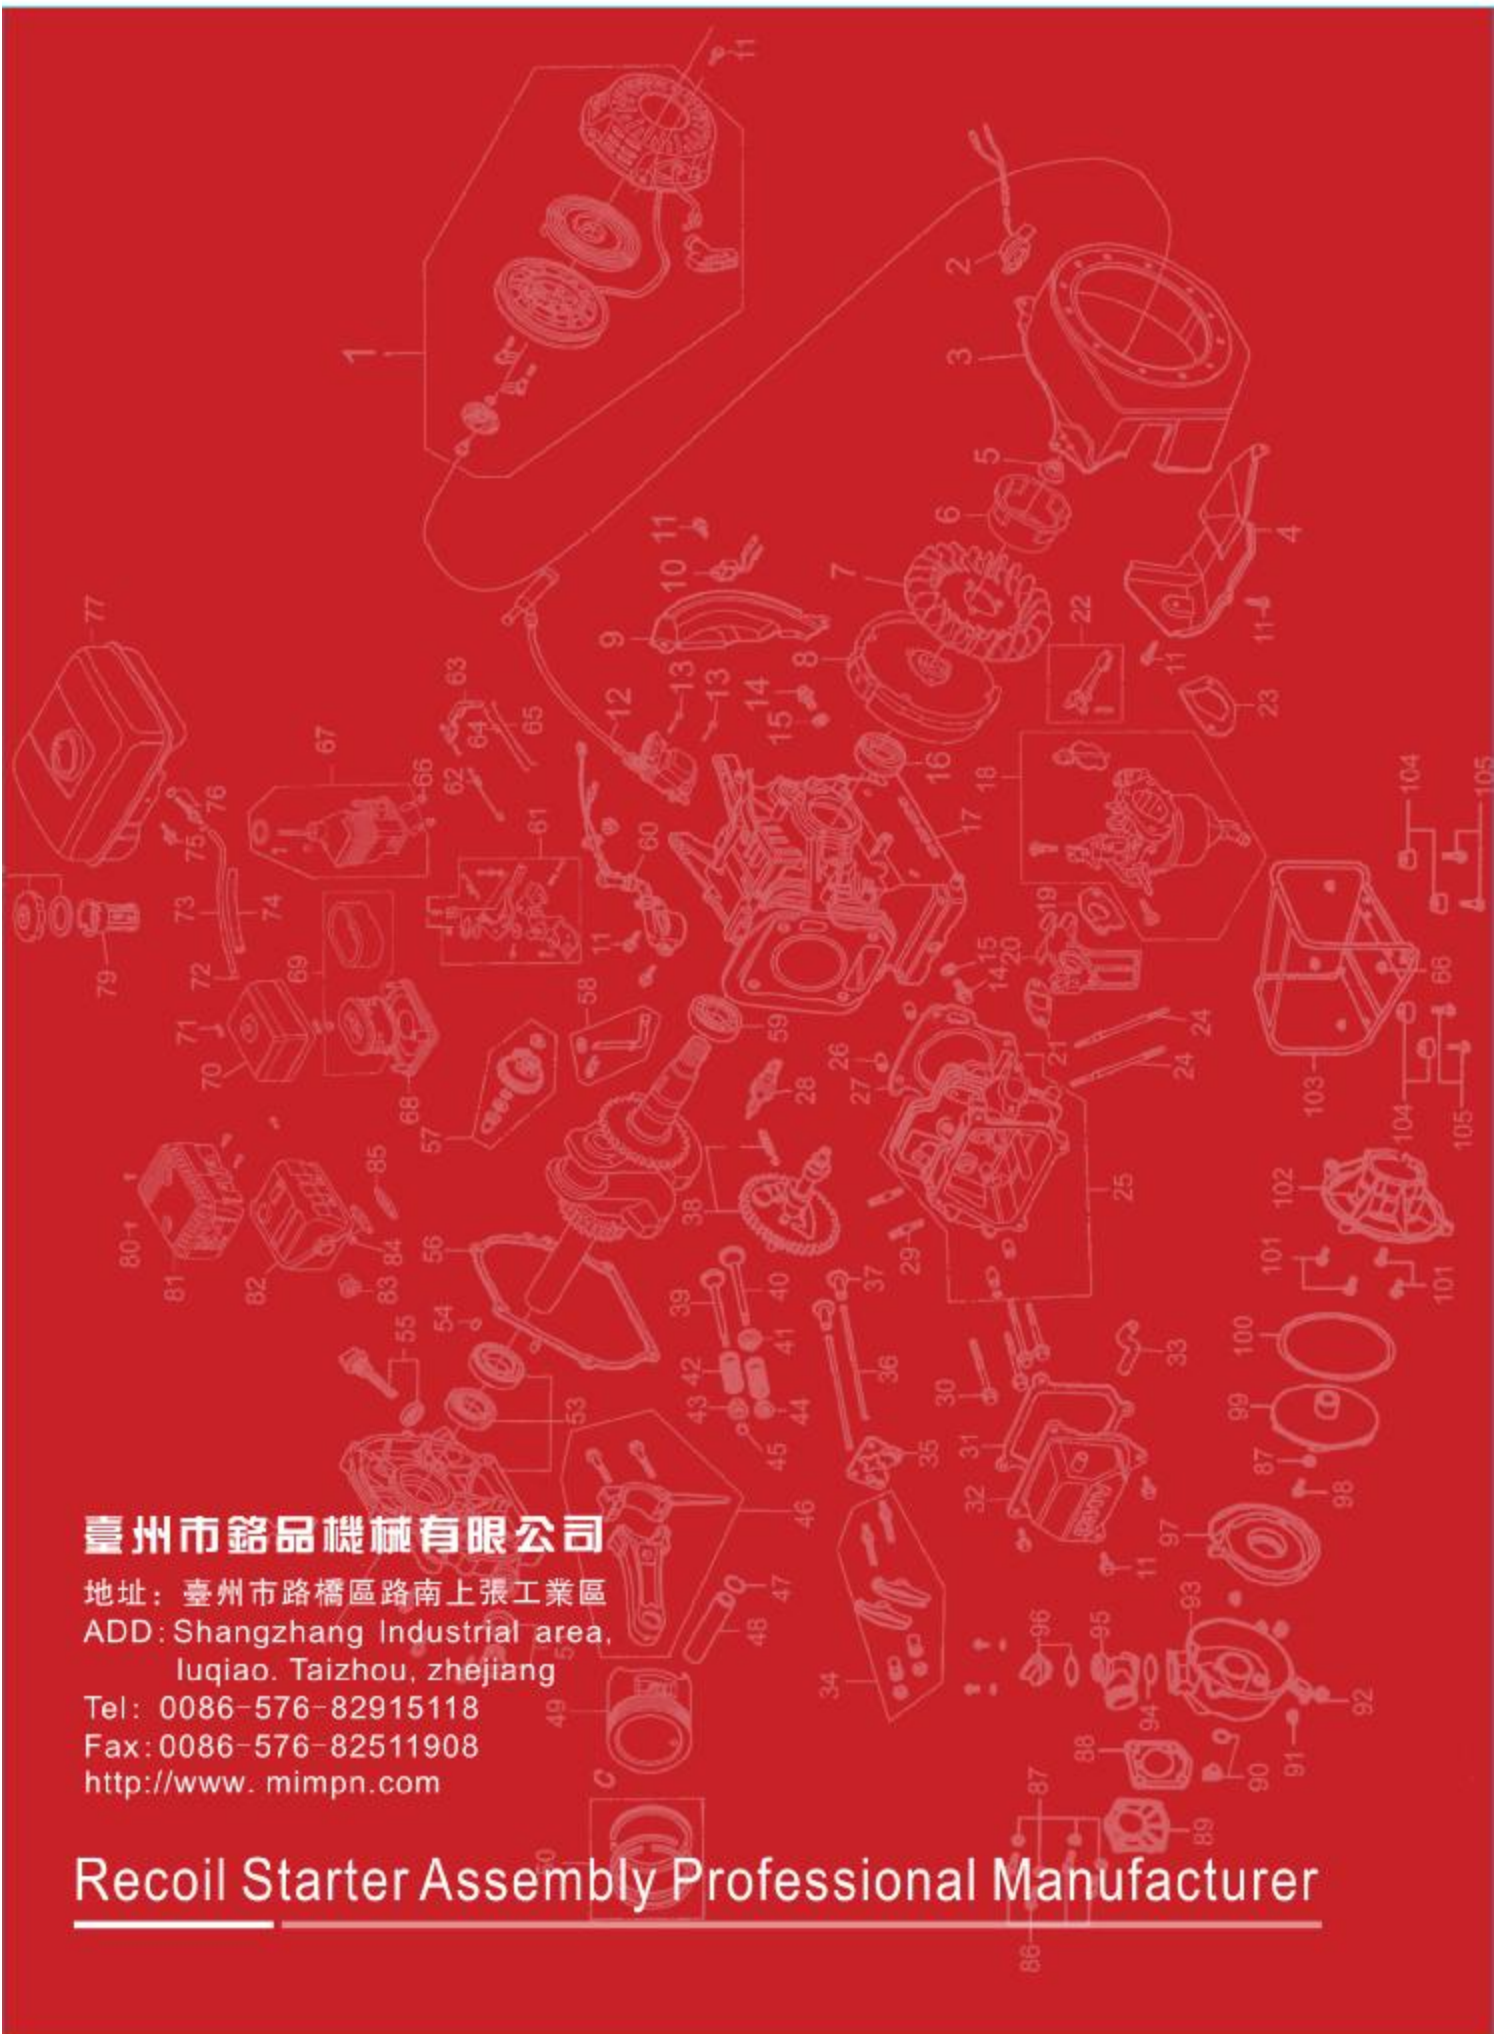

臺州市銘品機械有限公司

地址：臺州市路橋區路南上張工業區

ADD: Shangzhang Industrial area,
luqiao, Taizhou, zhejiang

Tel: 0086-576-82915118

Fax: 0086-576-82511908

<http://www.mimpn.com>

Recoil Starter Assembly Professional Manufacturer