



**GASOLINE ENGINE**

**GASOLINE GENERATOR**

**WATER PUMP**

**DIESEL ENGINE**

**AIR-COOLED DIESEL ENGINE**

**AIR-COOLED DIESEL GENERATOR**

# GENERATOR PARTS

ONE-STOP LOCATION ALL IN ONE SERVICE

**台州市绿洋园林机械有限公司**

TAIZHOU LVYANG GARDEN MACHINE CO.,LTD

地址：浙江省台州市路桥区蓬街工业区

Add: Pengjie Industrial Zone, Luqiao District,  
Taizhou City, Zhejiang Province, China 318057

Tel: 0086-0576-82900611 82748666

Fax: 0086-0576-82900611 82748666

Web : www.tzlymachine.com

Email : tzly-garden@vip.163.com

: zerohuang@tzlymachine.com

: Lee-LvYang@hotmail.com



Leading supplier of spare parts  
for full range of Generators and  
Engines



# GENERATOR PARTS

TAIZHOU LVYANG GARDEN MACHINE CO.,LTD.



# 汽油发电机

## GASOLINE GENERATOR

### ET950/650



启动器总成  
starter assy  
NO:950-001



面板  
Front panel  
NO:950-002



消声器 0.7kg  
Muffler 0.7kg  
NO:950-003



消声器 0.9kg  
Muffler 0.9kg  
NO:950-004



消声器 1.1kg  
Muffler 1.1kg  
NO:950-005



曲轴箱(右)  
Right Crank case  
NO:950-006



曲轴箱(左)  
Left Crank case  
NO:950-007



电机端盖6203  
Frame rear 6203  
NO:950-008



电机端盖6202  
Frame rear 6202  
NO:950-009



缸套 (黑色)  
Cylinder (black)  
NO:950-010



缸套 (灰色)  
Cylinder (gray)  
NO:950-011



曲轴  
Crankshaft  
NO:950-012



缸头  
Cylinder head  
NO:950-013



缸体罩  
Cover cylinder  
NO:950-014



活塞  
Piston  
NO:950-015



活塞环  
Piston ring  
NO:950-016



活塞销  
Piston pin  
NO:950-017



活塞销卡簧  
Clip (Piston pin)  
NO:950-018



进气阀门  
inlet valve  
NO:950-019



油箱油标  
Fuel meter  
NO:950-020



油箱盖  
Fuel tank cap  
NO:950-021



内螺纹油开关  
Fuel tap (Inner)  
NO:950-022



油开关(小)  
Fuel tap (small)  
NO:950-023



滤网组件  
Fuel filter  
NO:950-024



油箱  
Fuel tank  
NO:950-025



防震脚  
Shockproof foot  
NO:950-026



化油器(铝)  
Carburetor (AL)  
NO:950-027



化油器(半铝半锌)  
Carburetor (AL-Zn)  
NO:950-028



化油器(锌)  
Carburetor (Zn)  
NO:950-029



电容器(8UF-24UF)  
Capacitor (8UF-24UF)  
NO:950-030



电容器(12UF-50UF)  
Capacitor (12UF-50UF)  
NO:950-031



插头  
Plug  
NO:950-032



插头  
Plug  
NO:950-033



插头  
Plug  
NO:950-034



日式插头  
Japanese plug  
NO:950-035



日式插座  
Japanese receptacle  
NO:950-036



欧式插头(短)  
European plug (short)  
NO:950-037



欧式插头  
European plug  
NO:950-038



欧式插座 (蓝色)  
European receptacle (blue)  
NO:950-039



欧式插座 (红色)  
European receptacle (red)  
NO:950-040



多功能插座  
Multi-receptacle  
NO:950-041



普通插头  
Universal plug  
NO:950-042



过流保护器  
Overcurrent protector  
NO:950-043



开关  
Switch  
NO:950-044



过流保护器(小头)  
Overcurrent protector (small head)  
NO:950-050



整流器2510  
Rectifier 2510  
NO:950-051



整流器3510  
Rectifier 3510  
NO:950-052



T型插座  
T Receptacle  
NO:950-053



V型插座  
V Receptacle  
NO:950-054



直流线(V型)  
Battery charger wire (V)  
NO:950-055



调速拉杆  
Pburod adjusting  
NO:950-061



减压弹簧  
Decompression spring  
NO:950-062



调速修理包  
Governor repair kit  
NO:950-063



连杆(金黄色)  
Connecting rod (golden)  
NO:950-064



连杆(黑色)  
Connecting rod (black)  
NO:950-065



滚针轴承(小)  
Needle bearing (small)  
NO:950-071



滚针轴承(大)  
Needle bearing (big)  
NO:950-072



连杆销子 φ10  
Connecting rod dowel φ10  
NO:950-073



深沟球轴承6004  
Deep groove ball bearing 6004  
NO:950-074



轴承6203  
Bearing 6203  
NO:950-075



定子  
Stator  
NO:950-076



转子  
Rotor  
NO:950-077



法兰螺栓M6 x 20  
Bolt M6 x 20  
NO:950-078



法兰螺栓M6 x 10  
Bolt M6 x 10  
NO:950-079



法兰螺栓M6 x 45  
Bolt M6 x 45  
NO:950-080



法兰螺栓M6 x 55  
Bolt M6 x 55  
NO:950-081



双头螺栓M6 x 113  
Bolt M6 x 113  
NO:950-082



双头螺栓M6 x 73  
Bolt M6 x 73  
NO:950-083



十字螺丝M6 x 25  
Screw M6 x 25  
NO:950-084



十字螺丝M4 x 10  
Screw M4 x 10  
NO:950-085



法兰螺栓M6 x 80  
Bolt M6 x 80  
NO:950-086



十字大扁头螺丝M6 x 16  
Screw M6 x 16  
NO:950-087



十字螺丝M4 x 13  
Bolt M4 x 13  
NO:950-088



法兰螺栓M6 x 16  
Bolt M6 x 16  
NO:950-089



法兰螺栓M6 x 12  
Bolt M6 x 12  
NO:950-090



法兰螺栓M6 x 100  
Bolt M6 x 100  
NO:950-091



三组合螺丝M3 x 8  
Screw M3 x 8  
NO:950-092



气缸螺母M6 x 18  
Nut M6 x 18  
NO:950-093



法兰螺母M6  
Nut M6  
NO:950-094



法兰螺母M10  
Nut M10  
NO:950-095



直流线(T型)  
Battery charger wire(T)  
NO:950-096



垫片(缸体)  
Gasket(cylinder bottom)  
NO:950-097



垫片(化油器入口)  
Gasket(carburetor inlet)  
NO:950-098



垫片(化油器出口)  
Gasket(carburetor outlet)  
NO:950-099



垫片密封  
Gasket/Seal  
NO:950-100



垫片(缸头)  
Gasket(cylinder head)  
NO:950-101



消声器垫片  
Gasket(muffler)  
NO:950-102



全套垫片  
Gasket set  
NO:950-103



调速拉簧  
Speed governing spring  
NO:950-104



调速连杆拉簧  
Adjusting spring  
NO:950-105



十字螺丝6 x 30  
Screw 6 x 30  
NO:950-106



离心片架  
Stand  
NO:950-107



滑环  
Slip ring  
NO:950-108



调速叉  
Speed regulating fork  
NO:950-109



调速杆  
Shifter  
NO:950-110



火花塞  
Spark plug  
NO:950-111



飞轮(铝)  
Fly wheel(AL)  
NO:950-112



飞轮(塑料)  
Fly wheel(plastic)  
NO:950-113



调速臂  
adjusting arm  
NO:950-114



盖盘  
Drive plate  
NO:950-115



卷轮  
Drum wheel  
NO:950-116



夹簧  
Clip spring  
NO:950-117



拉绳  
Starter rope  
NO:950-118



挡块  
Bearing plate(black)  
NO:950-119



卷轮(米黄)  
Drum wheel(cream)  
NO:950-120



挡块(米色)  
Bearing plate(cream)  
NO:950-121



卷簧  
Pawl spring starter  
NO:950-122



拉手  
Handle starter  
NO:950-123



拉绳(一卷)  
Starter rope (roll)  
NO:950-124



950修理包  
Recoil starter repair kit  
NO:950-125



卡圈  
Circlip  
NO:950-126



指示灯  
Indicator  
NO:950-127



电压表  
Voltmeter  
NO:950-128



二级管6A  
Diode 6A  
NO:950-129



电机风叶  
Armature fan  
NO:950-130



高压包  
Ignition coil  
NO:950-131



点火器  
Ignitor  
NO:950-132



磁电机  
Magneto  
NO:950-133



曲轴油封 φ 20  
Oil seal φ 20  
NO:950-134



曲轴油封 φ 6  
Oil seal φ 6  
NO:950-135



手柄  
Handle  
NO:950-136



启动器总成  
starter assy  
NO:950-137



油箱总成  
Fuel tank assy  
NO:950-138



油箱盖  
Fuel tank cap  
NO:950-139



消声器  
Muffler  
NO:950-140



油开关  
Fuel tap  
NO:950-141



手柄螺丝  
Screw  
NO:950-142



油箱油标  
Fuel meter  
NO:950-143



手柄  
Handle  
NO:950-144



化油器  
Carburetor  
NO:950-145



面板  
Front panel  
NO:950-146



空滤棉  
Air cleaner sponge  
NO:950-147





# 汽油发电机 GASOLINE GENERATOR 154F/152F



- |  |   |  |   |   |
|--|---|--|---|---|
| <br>曲轴<br>Crankshaft<br>NO:154-001              | <br>正时齿轮<br>Timing gear<br>NO:154-002                    | <br>半月键<br>Semi key<br>NO:154-003               | <br>连杆总成<br>Connecting rod assy<br>NO:154-004    | <br>气缸垫片<br>Gasket(cylinder)<br>NO:154-005       |
| <br>消音器垫片<br>Gasket (muffler)<br>NO:154-008     | <br>垫片(化油器出口)<br>Gasket(carburetor outlet)<br>NO:154-007 | <br>全套垫片<br>Gasket set<br>NO:154-008            | <br>起动机A型<br>Starter pulley type-A<br>NO:154-009 | <br>起动机B型<br>Starter pulley type-B<br>NO:154-010 |
| <br>化油器<br>Carburetor<br>NO:154-011            | <br>活塞<br>Piston<br>NO:154-012                          | <br>活塞环总成<br>Piston ring set<br>NO:154-013     | <br>活塞销卡簧<br>Clip(piston pin)<br>NO:154-014     | <br>活塞销<br>Piston pin<br>NO:154-015             |
| <br>高压包总成<br>Ignition Coil assy<br>NO:154-016 | <br>火花塞<br>Spark plug<br>NO:154-017                    | <br>机油标尺组件<br>Oil gauge set<br>NO:154-018     | <br>推杆<br>Push rod<br>NO:154-019               | <br>挺柱<br>Valve lifter<br>NO:154-020           |
| <br>空滤器<br>Air cleaner<br>NO:154-021          | <br>空滤器<br>Air cleaner<br>NO:154-022                   | <br>调速齿轮总成<br>Governor gear set<br>NO:154-023 | <br>调速轴<br>Governor gear shaft<br>NO:154-024   | <br>滑套<br>Governor slider<br>NO:154-025        |

- |   |  |   |   |  |
|---|--|---|---|--|
| <br>箱盖(高)<br>Crank case cover(high)<br>NO:154-091      | <br>消声器<br>Muffler<br>NO:154-092                  | <br>油管<br>Fuel pipe<br>NO:154-093                  | <br>调速弹簧<br>Spring(governor)<br>NO:154-094       | <br>进排气门弹簧座下座<br>Retainer In/Ex spring (bottom)<br>NO:154-095 |
| <br>曲轴油封<br>Oil seal<br>NO:154-026                     | <br>高压线夹<br>High cable cleat<br>NO:154-027        | <br>化油器隔热板<br>Insulator carburetor<br>NO:154-028   | <br>进出口接头<br>In & Ex Joint<br>NO:154-029         | <br>定位销8 x 14<br>Locating dowel 8 x 14<br>NO:154-030          |
| <br>定位销10 x 16<br>Locating dowel 10 x 16<br>NO:154-031 | <br>电机调速座<br>Armature governor seat<br>NO:154-032 | <br>调速座<br>Governor seat<br>NO:154-033             | <br>调速臂拉杆<br>adjusting pull rod<br>NO:154-034    | <br>挡风板A<br>Windproof plate A<br>NO:154-035                   |
| <br>挡风板B<br>Windproof plate B<br>NO:154-036            | <br>调速手柄<br>Governor portable<br>NO:154-037       | <br>飞轮边罩<br>Fly wheel side cover<br>NO:154-038     | <br>导风罩<br>Wind scooper<br>NO:154-039            | <br>定位销<br>Locating dowel<br>NO:154-040                       |
| <br>滑套垫片<br>Gasket(governor slider)<br>NO:154-041     | <br>空滤器隔板<br>Air cleaner separator<br>NO:154-042 | <br>冷却风扇<br>Cooling fan<br>NO:154-043             | <br>转子<br>Rotor<br>NO:154-044                   | <br>定子<br>Stator<br>NO:154-045                               |
| <br>十字螺丝 M6 x 12<br>Screw M6 x 12<br>NO:154-046      | <br>双头螺丝 M6 x 90<br>Screw M6 x 90<br>NO:154-047 | <br>法兰螺栓 M8 x 55<br>Bolt M8 x 55<br>NO:154-048   | <br>法兰螺栓 M8 x 35<br>Bolt M8 x 35<br>NO:154-049 | <br>法兰螺栓 M8 x 20<br>Bolt M8 x 20<br>NO:154-050              |
| <br>法兰螺栓 M8 x 25<br>Bolt M8 x 25<br>NO:154-051       | <br>法兰螺母 M6<br>Nut M6<br>NO:154-052             | <br>法兰螺栓 M6 x 100<br>Bolt M6 x 100<br>NO:154-053 | <br>法兰螺栓 M6 x 20<br>Bolt M6 x 20<br>NO:154-054 | <br>双头螺丝 M8 x 32<br>Screw M8 x 32<br>NO:154-055             |

# 汽油发电机 GASOLINE GENERATOR 168F/2900H(GX160)

				
面版 Front panel NO:154-056	启动器总成 A型 starter assy(type-A) NO:154-057	启动器总成 B型 starter assy(type-B) NO:154-058	启动器总成 B型 starter assy(type-B) NO:154-059	启动器总成 starter assy NO:154-060
				
蜗壳 Fan case NO:154-061	箱体 Crank case NO:154-062	箱盖(低) Crank case cover (low) NO:154-063	电机支架(无刷 φ150) Armature seat (without brush ) NO:154-064	电机支架(无刷 φ160) Armature seat (without brush ) NO:154-065
				
气缸头总成 Cylinder head assy NO:154-066	气缸盖总成 Cylinder head cover assy NO:154-067	摇臂总成 Rocker arm assy NO:154-068	进排气门 Intake & Exhaust valve NO:154-069	进排气门弹簧座 Retainer NO:154-070
				
气门弹簧 Valve spring NO:154-071	卷簧 Pawling spring starter NO:154-072	跳爪 Paw NO:154-073	磁飞轮 Fly wheel NO:154-074	凸轮轴总成 Camshaft assy NO:154-075
				
摆杆 Governor arm shaft NO:154-076	深沟球轴承6203 Ball bearing 6203 NO:154-077	油箱 Fuel tank NO:154-078	油开关 Fuel tap NO:154-079	凸轮轴总成(尼龙) Camshaft assy (nylon) NO:154-080
				
法兰面螺丝 M6×7 Screw M6×7 NO:154-081	法兰螺母(粗螺) M12×1.25 Nut M12×1.25 NO:154-082	法兰螺栓 M6×25 Bolt M6×25 NO:154-083	法兰螺栓 M6×16 Bolt M6×16 NO:154-084	法兰螺栓 6×12 Bolt M5×12 NO:154-085
				
调速轴卡簧 Clip(governor shaft) NO:154-086	滑套 Governor slider NO:154-087	推杆 Push rod NO:154-088	挺柱 Valve lifter NO:154-089	法兰螺母 M8 Nut M8 NO:154-090



				
启动器总成(塑) starter assy(plastic) NO:168-001	启动器总成(铁) starter assy(iron) NO:168-002	2900启动器总成(铁) 2900 Starter assy(iron) NO:168-003	2900启动器总成(塑) 2900 Starter assy(plastic) NO:168-004	蜗壳 Fan case NO:168-005
				
6.5HP箱体 6.5HP Crank case NO:168-006	5.5HP箱体 5.5HP Crank case NO:168-007	箱盖(低) Crankcase cover (low) NO:168-008	气缸盖罩总成 Cylinder head cover assy NO:168-009	气缸头 Cylinder head NO:168-010
				
气缸头总成 Cylinder head assy NO:168-011	气门弹簧 Valve spring NO:168-012	进排气门 Intake & exhaust valve NO:168-013	进排气门(白色) Intake & Ex valve (white) NO:168-014	进排气门弹簧座 Retainer In & Ex valve spring Plate NO:168-015
				
排气门护帽 Exhaust valve cap NO:168-016	推杆支架 Plate push rod guide NO:168-017	推杆支架(尼龙) Plate push rod guide (nylon) NO:168-018	摇臂总成 Rocker arm assy NO:168-019	机油报警器 Oil alert NO:168-020
				
机油分离器 Oil separator NO:168-021	高压包 Ignition coil NO:168-022	连杆总成 Connecting rod assy NO:168-023	调速齿轮总成 Governor gear set NO:168-024	调速轴 Governor gear sha NO:168-025



火花塞  
Spark plug  
NO:168-026



箱盖垫片  
Gasket(crank case cover)  
NO:168-027



气缸盖罩垫片  
Gasket(cylinder cover)  
NO:168-028



气缸垫片  
Gasket(cylinder)  
NO:168-029



空滤器纸垫片  
Gasket(air filter)  
NO:168-030



断路器  
Circuit breaker  
NO:168-056



断路器  
Circuit breaker  
NO:168-057



电门锁  
Lock & key  
NO:168-058



熄火开关  
Stop switch  
NO:168-059



油开关(带滤网)  
with strainer  
NO:168-060



空滤器橡胶铁垫片  
Rubber gasket(air filter)  
NO:168-031



化油器连接垫片  
Gasket(carburetor joint)  
NO:168-032



消声器垫片  
Gasket(muffler)  
NO:168-033



化油器出口垫片  
Gasket(carburetor outlet)  
NO:168-034



全套垫片  
Gasket set  
NO:168-035



油开关  
Fuel tap(outer)  
NO:168-061



内螺纹油开关  
Fuel tap(outer)  
NO:168-062



继电器  
Relay  
NO:168-063



马达带继电器  
Motor with relay  
NO:168-064



曲轴5.5HP(23轴)  
Crankshaft 5.5HP 23  
NO:168-065



化油器隔热板  
Insulator carburetor  
NO:168-036



高压帽  
Ignition coil cap  
NO:168-037



呼吸气管  
Ventilator  
NO:168-038



启动鼓(铁)  
Starter pulley (iron)  
NO:168-039



启动鼓(塑)  
Starter pulley (plastic)  
NO:168-040



曲轴5.5HP(19轴)  
Crankshaft 5.5HP 19  
NO:168-066



曲轴6.5HP(23轴)  
Crankshaft 6.5HP 23  
NO:168-067



曲轴6.5HP(19轴)  
Crankshaft 6.5HP 19  
NO:168-068



调速驱动齿轮  
Driving gear  
NO:168-069



正时齿轮  
Timing gear  
NO:168-070



机油标尺  
Oil dipstick  
NO:168-041



活塞5.5HP  
Piston 5.5HP  
NO:168-042



活塞6.5HP  
Piston 6.5HP  
NO:168-043



活塞销  
Piston pin  
NO:168-044



活塞环  
Piston ring  
NO:168-045



凸轮轴总成(铁)  
Camshaft assy (iron)  
NO:168-071



凸轮轴(尼龙)  
Camshaft assy (nylon)  
NO:168-072



电瓶12V12AH  
Storage battery 12V12AH  
NO:168-073



电瓶12V12AH  
Storage battery 12V12AH  
NO:168-074



磁飞轮(电动)  
Fly wheel(electric)  
NO:168-075



活塞销卡簧  
Clip(piston pin)  
NO:168-046



化油器  
Carburetor  
NO:168-047



调压器(铝)  
AVR (AL)  
NO:168-048



调压器(塑壳)  
AVR (Plastic)  
NO:168-049



调压器(长方形)  
AVR(rectangle)  
NO:168-050



磁飞轮  
Fly wheel  
NO:168-076



碳刷(米黄)  
Carbon brush (cream)  
NO:168-077



碳刷(黑)  
Carbon brush (black)  
NO:168-078



曲轴油封  
Oil seal  
NO:168-079



进气门导管油封  
Oil seal (intake valve)  
NO:168-080



电容42UF  
Capacitor 42UF  
NO:168-051



电容24UF  
Capacitor 24UF  
NO:168-052



开关(船型)  
Switch  
NO:168-053



美式插头  
American plug  
NO:168-054



美式插座  
American receptacle  
NO:168-055



电机支架(有刷)  
Armature seat with brush  
NO:168-081



电机支架(无刷)  
Armature seat without brush  
NO:168-082



电机支架G203轴承孔  
Armature seat G203 bearing  
NO:168-083



箱盖(高)  
Crank case cover(high)  
NO:168-084



轴承6204  
Bearing 6204  
NO:168-085

				
钢垫 6×15×0.5 Gasket 6×15×0.5 NO:168-086	加大垫片 6×25 Gasket 6×25 NO:168-087	摆杆 Governor arm shaft NO:168-088	调速座 Governor seat NO:168-089	飞轮边罩 Fly wheel side cover NO:168-090
				
导风罩 Wind scoop NO:168-091	调速臂 speed adjusting arm NO:168-092	压线板 Pressing line plat NO:168-093	电启动边罩 Side cover (electric starter) NO:168-094	冷却风扇(黑) Cooling fan (black) NO:168-095
				
冷却风扇(白) Cooling fan(white) NO:168-096	滑环 Slip ring NO:168-097	转子 Rotor NO:168-098	定子 Stator NO:168-099	法兰螺母M6 Nut M6 NO:168-100
				
法兰螺母M8 Nut M8 NO:168-101	法兰螺母M14 Nut M14 NO:168-102	法兰螺栓 8×16M Bolt 8×16 M NO:168-103	法兰螺栓 6×10M Bolt 6×10 M NO:168-104	法兰螺栓 6×12M Bolt 6×12 M NO:168-105
				
法兰螺栓 6×125M Bolt 6×125 M NO:168-106	法兰螺栓 6×16M Bolt 6×16 M NO:168-107	十字螺丝 5×12M Screw 5×12 M NO:168-108	法兰螺栓 6×8M Bolt 6×8 M NO:168-109	十字沉头 5×10M Screw 5×10 M NO:168-110
				
十字螺丝 5×16M Screw 5×16 M NO:168-111	法兰螺栓 6×22M Bolt 6×22 M NO:168-112	法兰螺栓 8×32M Bolt 8×32 M NO:168-113	双头螺丝 6×32M Screw 6×32 M NO:168-114	双头螺丝 6×110M Screw 6×110 M NO:168-115
				
方头螺丝 6×12M Screw 6×12 M NO:168-116	法兰螺栓 8×205M Bolt 8×205 M NO:168-117	法兰螺栓 8×55M Bolt 8×55 M NO:168-118	拉杆弹簧 Spring(pull rod) NO:168-119	调速器拉杆 Governor pull rod NO:168-120

				
轴承6205 Bearing 6205 NO:168-121	空滤器 Air filter NO:168-122	空滤器海绵 Air filter sponge NO:168-123	消声器 Muffler NO:168-124	消声器罩 Muffler cover NO:168-125
				
2900消声器罩 2900 Muffler cover NO:168-126	2900消声器 2900 Muffler NO:168-127	油箱总成 Fuel tank assy NO:168-128	油箱油标 Fuel meter NO:168-129	油箱盖 Fuel tank cap NO:168-130
				
电压表 Voltmeter NO:168-131	防震脚 Shockproof foot NO:168-132	防震脚(中心脚) Shockproof foot (center) NO:168-133	电机机架脚垫 Foot gasket(Armature seat) NO:168-134	油箱橡胶垫 Rubber gasket(fuel tank) NO:168-135
				
定位销10×16 Locating dowel 10×16 NO:168-136	定位销8×14 Locating dowel 8×14 NO:168-137	卷轮(铁) Drum wheel (iron) NO:168-138	卷轮(塑) Drum wheel (plastic) NO:168-139	挡块(铁) Bearing plate (iron) NO:168-140
				
卷簧 Pawling spring starter NO:168-141	拉绳 Starter Rope NO:168-142	盖盘(铁) Drive plate(iron) NO:168-143	盖盘(塑料) Drive plate(plastic) NO:168-144	拉盘配件(塑料) Starter repair kit (plastic) NO:168-145
				
拉盘配件(铁) Starter repair kit (iron) NO:168-146	接线柱 Terminal NO:168-147	调速弹簧 Spring(governor) NO:168-148	油箱 Fuel tank NO:168-149	修理包 Recoil starter repair kit NO:168-150

# 汽油机水泵系列

## GASOLINE WATER PUMP

### WP20/30/40



出水口  
Water outlet  
NO: CX001



皮带轮  
Belt roller  
NO: CX002



泵壳  
Pump case  
NO: CX003



箱盖(低)  
Crankcase cover(low)  
NO: CX004



进出水口接头(铝)  
Water In & Ex joint (AL)  
NO: CX005



 
扳手  
Spanner  
NO: CX006



水泵化油器  
Carburetor (water pump)  
NO: CX007



化油器带油杯  
Carburetor with fuel cup  
NO: CX008



水泵熄火开关(单线)  
Stop switch (single)  
NO: CX009



水泵熄火开关(双线)  
Stop switch (double)  
NO: CX010



曲轴(键槽)  
Crankshaft (rectangle)  
NO: CX011



曲轴(螺纹)  
Crankshaft (whorl)  
NO: CX012



 
YP20水封  
Water seal (YP20)  
NO: CX013



ET1500水封  
Water seal (ET1500)  
NO: CX014



YP30水封  
Water seal (YP30)  
NO: CX015



水带 2 3/4"  
Pump hose  
NO: CX016



大密封圈  
Big seal ring  
NO: CX017



进出水口密封圈  
Seal ring (inlet & outlet)  
NO: CX018



出水口密封垫  
Gasket (water outlet)  
NO: CX019



进水口垫片(拍门)  
Gasket (water inlet)  
NO: CX020



动力空滤器  
Engine air filter  
NO: CX021



水泵消声器(黑)  
Muffler (black)  
NO: CX022



水泵消声器(镀铬)  
Pump muffler (Cr)  
NO: CX023



叶轮  
Impeller  
NO: CX024



涡流壳  
Swirling shell  
NO: CX025



进出水口接头  
Joint (water inlet & outlet)  
NO: CX026



扳手(塑)  
Spanner (plastic)  
NO: CX027



堵塞  
Blocker  
NO: CX028



 
进水滤网  
Water inlet strainer  
NO: CX029



水泵调速座  
Governor seat (pump)  
NO: CX030



水泵油箱总成  
Fuel tank assy  
NO: CX031



水泵油箱盖(铁)  
Fuel tank cover (iron)  
NO: CX032



水泵油箱盖(塑料)  
Fuel tank cover (plastic)  
NO: CX033



水泵滤网  
Pump strainer  
NO: CX034



出油接口  
Fuel control valve  
NO: CX035



启动器总成(铁)  
ster assy (iron)  
NO: CX036



启动器总成(塑)  
starter assy (plastic)  
NO: CX037



泵体座  
Pump block seat  
NO: CX038



进水口  
Water inlet  
NO: CX039



卡箍  
Clip  
NO: CX040



# 水泵系列

## WATER PUMP SERIES



名称: 1.5"/40拖泵  
PULLEY PUMP  
NO:WP002



名称: 2"/50拖泵  
PULLEY PUMP  
NO:WP003



名称: 1"/40  
PULLEY PUMP  
NO:WP001



名称: 3"/80拖泵  
PULLEY PUMP  
NO:WP004



名称: 4"/100拖泵  
PULLEY PUMP  
NO:WP005



名称: 2"/50高压泵  
HIGH PRESSURE PUMP  
NO:WP006



名称: 2"/50自吸泵  
CENTRIFUGAL PUMP  
NO:WP007



名称: 3"/80自吸泵  
CENTRIFUGAL PUMP  
NO:WP008



名称: 4"/100自吸泵  
CENTRIFUGAL PUMP  
NO:WP009



名称: 泵体  
PUMP CASE  
NO:WP010



名称: 泵盖  
CASE COVER  
NO:WP011



名称: 出水口  
WATER OUTLET  
NO:WP012



名称: 进水口  
WATER INLET  
NO:WP013



名称: 进出水组件(铝)  
WATER INLET ASSY(AL)  
NO:WP014



名称: 皮带轮  
BELT ROLLER  
NO:WP015



名称: 叶轮  
IMPELLER  
NO:WP016



名称: 叶轮  
IMPELLER  
NO:WP017



名称: 蜗轮  
SWIRLING WHEEL  
NO:WP018



名称: 蜗轮  
SWIRLING WHEEL  
NO:WP019



名称: 密封垫  
RUBBER,GASKET  
NO:WP020



名称: 接头密封垫  
SEAL  
NO:WP021



名称: 水封  
WATER SEAL  
NO:WP022



名称: 瓷垫圈  
CERAMICS SEAL  
NO:WP023



名称: 瓷垫圈橡胶套  
RUBBER SEAT  
NO:WP024



名称: 出水方垫  
GASKET(WATER,OUTLET)  
NO:WP025



名称: 止回阀(进水)  
GASKET INLET  
NO:WP026



名称: 进出水组件(塑料)  
WATER INLET(PLASTIC)  
NO:WP027



名称: 滤网  
STRAINER  
NO:WP028



名称: 堵头旋扭  
BLOCKER  
NO:WP029



名称: 钢丝卡箍  
SS CLIP  
NO:WP030



名称: 塑料垫片  
GASKET,PLASTIC  
NO:WP031



名称: 平垫  
FLAT WASHER  
NO:WP032



名称: 螺丝  
BOLT  
NO:WP033



名称: 法兰螺丝  
FLANGE BOLT  
NO:WP034

备注: 叶轮有键槽或螺纹

# 汽油发电机 GASOLINE GENERATOR 160/MZ175/2600 (雅马哈)



 启动器总成 starter assy NO:160-001	 蜗壳 Fan case NO:160-002	 箱体 Crank case NO:160-003	 电机支架 Armature seat NO:160-004	 箱盖高 Crank case cover(high) NO:160-005
 化油器 Carburetor NO:160-006	 连杆 Connecting rod NO:160-007	 活塞 Piston NO:160-008	 活塞环 Piston ring NO:160-009	 活塞销 Piston pin NO:160-010
 活塞销卡簧 Clip (piston pin) NO:160-011	 气缸头总成 Cylinder head assy NO:160-012	 摇臂总成 Rocker arm assy NO:160-013	 进排气门 Intake & exhaust valve NO:160-014	 摆杆支架 Plate push rod guide NO:160-015
 气门弹簧 Valve spring NO:160-016	 火花塞 Spark plug NO:160-017	 内螺纹油开关 Fuel tap (inner) NO:160-018	 内螺纹油开关(带滤网) Fuel tap with strainer NO:160-019	 机油传感器 Oil alert NO:160-020
 高压包总成 Ignition Coil assy NO:160-021	 断路器 Circuit breaker NO:160-022	 电容器24UF Capacitor 24UF NO:160-023	 调压器(铝) AVR (AL) NO:160-024	 调速齿轮总成 Governor gear set NO:160-025
 滑套 Governor slider NO:160-026	 调速轴 Governor gear shaft NO:160-027	 曲轴 Crankshaft NO:160-028	 定子 Stator NO:160-029	 转子 Rotor NO:160-030

 消声器罩 Muffler cover NO:160-031	 防震脚 Shockproof foot NO:160-032	 空滤器 Air filter NO:160-033	 轴承 Bearing NO:160-034	 全套垫片 Gasket set NO:160-035
 垫片(缸头) Gasket (cylinder head) NO:160-036	 箱盖垫片 Gasket (crankcase cover) NO:160-037	 气缸纸垫 Gasket Cylinder NO:160-038	 消音器垫片 Gasket (muffler) NO:160-039	 化油器出口垫片 Gasket (carburetor outlet) NO:160-040
 化油器垫片 Gasket (carburetor) NO:160-041	 油箱总成 Fuel tank assy NO:160-042	 油箱盖 Fuel tank cap NO:160-043	 油箱油标 Fuel meter NO:160-044	 机油标尺组件 Oil dipstick NO:160-045
 调速弹簧 Spring (governor) NO:160-046	 调速器连杆 Governor connecting rod NO:160-047	 工具杆 Tool bar NO:160-048	 拉杆弹簧 Spring (pull rod) NO:160-049	 摆杆卡簧 Clip (governor arm shaft) NO:160-050
 卷轮 Drum wheel NO:160-051	 卷簧 Pawling spring starter NO:160-052	 压板配件 Plate accessories NO:160-053	 海绵 Sponge NO:160-054	 呼吸气管 Vetliator pipe NO:160-055
 电机风叶 Armature fan NO:160-057	 调速臂 Adjusting arm NO:160-058	 压线板 Pressing line plate NO:160-059	 调速座 Governor seat NO:160-060	 凸轮轴总成 Camshaft assy NO:160-061
 半月键 Semi key NO:160-063	 正时齿轮 Timing gear NO:160-064	 消声器 Muffler NO:160-065	 电容器 CAPACITOR NO:160-066	 电压表 VOLTMETER NO:160-067
 开关 SWITCH NO:160-069	 直流开关 STRAIGHT SWITCH NO:160-070	 指示灯 INDICATOR LIGHT NO:160-071	 直流接头 CONNECTOR NO:160-072	

# 汽油发电机

## GASOLINE GENERATOR

### 188F/182F(GX390/340)



面板  
Front panel  
NO:188-001



启动器总成  
starter assy  
NO:188-002



扇壳  
Fan case  
NO:188-003



182箱体  
182 Crank case  
NO:188-004



188箱体  
188 Crank case  
NO:188-005



箱盖(高)  
Crank case cover(high)  
NO:188-006



前端盖  
Front cover  
NO:188-007



电机支架  
Armature seat  
NO:188-008



气缸头  
Cylinder head  
NO:188-009



气缸头总成  
Cylinder head assy  
NO:188-010



摆杆支架(铁)  
Plate push rod guide (iron)  
NO:188-011



摆杆支架(尼龙)  
Plate push rod guide (nylon)  
NO:188-012



进排气门弹簧座  
Retainer In & Ex valve spring  
NO:188-013



摇臂总成  
Rocker arm assy  
NO:188-014



进排气门  
Intake & exhaust valve  
NO:188-015



排气门护帽  
Exhaust valve cap  
NO:188-016



推杆  
Push rod  
NO:188-017



摆杆  
Pendulum bar  
NO:188-018



气缸盖罩总成  
Cylinder head cover assy  
NO:188-019



汽缸总成螺丝  
Screw(cylinder assy)  
NO:188-020



182活塞  
182 Piston  
NO:188-021



188活塞  
188 Piston  
NO:188-022



182活套环  
182 Piston ring  
NO:188-023



188活套环  
188 Piston ring  
NO:188-024



活塞销  
Piston pin  
NO:188-025



化油器(水泵)  
Carburetor(water pump)  
NO:188-026



曲轴  
Crankshaft  
NO:188-027



平衡轴  
Balance shaft  
NO:188-028



凸轮轴总成  
Camshaft assy  
NO:188-029



半月键  
Semi-key  
NO:188-030



磁飞轮(手动)  
Fly wheel (manual)  
NO:188-031



磁飞轮(电动)  
Fly wheel (electric)  
NO:188-032



马达带继电器  
Motor with relay  
NO:188-033



继电器  
Relay  
NO:188-034



调压器(三相)  
AVR (three-phase)  
NO:188-035



调压器(单相)  
AVR (single-phase)  
NO:188-036



调压器(铝)  
AVR(AL)  
NO:188-037



高压包  
Ignition coil  
NO:188-038



启动导线  
Ignitor  
NO:188-039



机油报警器  
Oil alert  
NO:188-040



充电线圈  
Charge coil  
NO:188-041



碳刷  
Carbon brush  
NO:188-042



碳刷(米黄)  
Carbon brush(cream)  
NO:188-043



接线柱  
Terminal  
NO:188-044



曲轴油封  
Oil seal  
NO:188-045



断路器  
Circuit breaker  
NO:188-046



阻风门调节泵  
Governing pump(choke valve)  
NO:188-047



防震脚  
Shockproof foot  
NO:188-048



调速齿轮  
Governor gear set  
NO:188-049



滑套  
Governor slider  
NO:188-050



调速轴  
Governor gear shaft  
NO:188-051



连杆  
Connecting rod  
NO:188-052



气门导管油封  
Oil seal  
NO:188-053



轴承  
Bearing  
NO:188-054



轴承6207  
Ball bearing 6207  
NO:188-055



启动鼓  
Starter pulley  
NO:188-056



火花塞  
Spark plug  
NO:188-057



机油标尺  
Oil dipstick  
NO:188-058



内螺纹油开关  
Fuel tap (inner)  
NO:188-059



外螺纹油开关  
Fuel tap (outer)  
NO:188-060



188水泵油箱  
Fuel tank (188 water pump)  
NO:188-061



油箱总成  
Fuel tank assy  
NO:188-062



油箱油标  
Fuel meter  
NO:188-063



油箱盖  
Fuel tank cap  
NO:188-064



定位销  
Locating dowel  
NO:188-065



冷却风扇  
Cooling fan  
NO:188-100



电机后罩  
Rear cover  
NO:188-101



转子  
Rotor  
NO:188-102



定子  
Stator  
NO:188-103



法兰螺母  
Nut  
NO:188-104



箱体垫片  
Gasket (crank case)  
NO:188-066



气缸垫片  
Gasket (cylinder)  
NO:188-067



空滤器垫片  
Gasket (air cleaner)  
NO:188-068



消声器垫片  
Gasket (muffler)  
NO:188-069



空滤器橡胶垫片  
Rubber gasket (air cleaner)  
NO:188-070



缸头盖垫片(橡胶)  
Rubber gasket (cylinder cap)  
NO:188-071



全套垫片  
Gasket set  
NO:188-072



卷轮(黑色)  
Drum wheel (black)  
NO:188-073



卷轮(米黄)  
Drum wheel (cream)  
NO:188-074



盖盘  
Drive plate  
NO:188-075



拉绳  
Starter rope  
NO:188-076



拉手  
Portable  
NO:188-077



卷簧  
Pawling spring starter  
NO:188-078



化油器隔热板  
Insulator carburetor  
NO:188-079



导风罩  
Wind scoop  
NO:188-080



空滤器  
Air cleaner  
NO:188-081



导流罩  
Current scoop  
NO:188-082



调速臂  
Governor arm  
NO:188-083



空滤器支架  
Air cleaner bracket  
NO:188-084



套筒全套  
Liner full set  
NO:188-085



引出线压板  
Cable plate  
NO:188-086



空滤器海绵  
Air cleaner sponge  
NO:188-087



网条  
Net bar  
NO:188-088



线夹  
Line cleat  
NO:188-089



平垫10×30  
Flat washer 10×30  
NO:188-090



电机风叶  
Armature fan  
NO:188-091



电机风叶(铝)  
Armature fan (AL)  
NO:188-092



消音器  
Muffler  
NO:188-093



弯管  
Elbow  
NO:188-094



188水泵空滤器  
Air cleaner (188 water pump)  
NO:188-095



化油器带手柄  
Carburetor with handle  
NO:188-096



化油器  
Carburetor  
NO:188-097



单向阀  
One way valve  
NO:188-098



188水泵消音器  
Muffler (188 water pump)  
NO:188-099



法兰螺母  
Nut  
NO:188-105



法兰螺母M8  
Nut M8  
NO:188-106



法兰螺母M6  
Nut M6  
NO:188-107



法兰螺栓 M8×32  
Bolt M8×32  
NO:188-108



法兰螺栓  
Bolt  
NO:188-109



法兰螺栓  
Bolt  
NO:188-110



法兰螺栓  
Bolt  
NO:188-111



法兰螺栓  
Bolt  
NO:188-112



双头螺丝 M8×32  
Screw M8×32  
NO:188-113



双头螺丝 M6×M8×106  
Screw M6×M8×106  
NO:188-114



十字螺丝 M6×12  
Screw M6×12  
NO:188-115



十字螺丝 M6×5  
Screw M6×5  
NO:188-116



十字螺丝 M5×12  
Screw M5×12  
NO:188-117



十字螺丝 M5×16  
Screw M5×16  
NO:188-118



加大垫片 M6×25  
Gasket M6×25  
NO:188-119



法兰螺栓  
Bolt  
NO:188-120



方头螺丝 M6×21  
Screw M6×21  
NO:188-121



M10×80  
Bolt M10×80  
NO:188-122



M8×260  
Bolt M8×260  
NO:188-123



法兰螺栓 M8×35  
Bolt M8×35  
NO:188-124



法兰螺栓  
Bolt  
NO:188-125



M8×32  
Bolt M8×32  
NO:188-126



M8×25  
Bolt M8×25  
NO:188-127



法兰螺栓  
Bolt  
NO:188-128



M6×180  
Bolt M6×180  
NO:188-129

# 汽油发电机 GASOLINE GENERATOR 173F/177F(GX240/GX270)





## 柴油发电机 DIESEL GENERATOR 186/L100





卡簧  
Clip (piston pin)  
NO:186-026



活塞环  
Piston ring  
NO:186-027



摇臂总成  
Rocker arm assy  
NO:186-028



进排气门  
Intake & exhaust valve  
NO:186-029



气门弹簧座  
Valve spring retainer  
NO:186-030



喷油器总成(长)  
Oil injector assy (long)  
NO:186-056



油嘴偶件(长)  
Oil nozzle (long)  
NO:186-057



油嘴偶件(短)  
Oil nozzle (short)  
NO:186-058



机油泵总成  
Oil pump assy  
NO:186-059



机油传感器  
Oil sensor  
NO:186-060



进排气门弹簧座下座  
Valve spring retainer (bottom)  
NO:186-031



气门锁片  
valve cotter  
NO:186-032



气门弹簧  
Valve spring  
NO:186-033



护帽  
Protect cap  
NO:186-034



低噪音柴油滤清器总成  
Diesel filter assy (low noise)  
NO:186-035



平衡轴  
Balance shaft  
NO:186-110



凸轮轴总成  
Camshaft assy  
NO:186-111



机油滤网  
Oil strainer  
NO:186-112



主轴瓦  
Main bearing  
NO:186-113



 
连杆瓦  
Connecting rod bearing  
NO:186-114



柴油滤芯(开架)  
Diesel filter element (open shell)  
NO:186-036



柴油滤清器总成  
Diesel filter assy  
NO:186-037



滤芯(静音)  
Diesel filter element (silence)  
NO:186-038



面板  
Front panel  
NO:186-039



断路器  
Circuit breaker  
NO:186-040



挺柱  
Valve lifter  
NO:186-061



推杆  
Push rod  
NO:186-062



连杆  
Connecting rod  
NO:186-063



油开关  
Fuel tap  
NO:186-064



油门支架  
Bracket (accelerograph)  
NO:186-065



拉绳  
Starter string  
NO:186-041



波纹管  
Bellows NO:1-042  
NO:186-042



空滤器  
Air cleaner  
NO:186-043



空滤器(静音)  
Air cleaner (silence)  
NO:186-044



空滤器滤芯  
Air cleaner element  
NO:186-045



启动鼓  
Starter pulley  
NO:186-066



电瓶12V20Ah  
Storage Battery 12V20Ah  
NO:186-067



电压表  
Voltmeter  
NO:186-068



磁飞轮  
Fly wheel  
NO:186-069



滚针轴承  
Needle bearing  
NO:186-070



消声器(开架)  
Muffler (open shell)  
NO:186-046



消声器(静音)  
Muffler (silence)  
NO:186-047



消声器(静音)  
Muffler (silence)  
NO:186-048



曲轴  
Crankshaft  
NO:186-049



正时齿轮  
Timing gear  
NO:186-050



防震脚  
Shockproof foot  
NO:186-071



机油标尺  
Oil dipstick  
NO:186-072



深沟球轴承  
Ball bearing  
NO:186-073



油泵挺柱  
Oil pump lifter  
NO:186-074



高压油管  
High pressure oil pipe  
NO:186-075



调速驱动齿轮  
Driving gear  
NO:186-051



槽型键  
Rectangle key  
NO:186-052



喷油泵(电动)  
Fuel injector pump (electric)  
NO:186-053



喷油泵(手动)  
Fuel injector pump (manual)  
NO:186-054



喷油器总成(短)  
Oil injector assy (short)  
NO:186-055



稳压器支架  
Bracket (voltage regulator)  
NO:186-076



外减压手柄  
Decompression portable  
NO:186-077



拨叉总成  
Shift fork assy  
NO:186-078



油箱支架  
Fuel tank support  
NO:186-079



导风板  
Wind scooper  
NO:186-080

# 柴油发电机 DIESELGENERATOR 178/170



- |   |  |  |  |  |
|---|--|--|--|--|
| <br>油封<br>Oil seal<br>NO:186-081                 | <br>垫片<br>Gasket<br>NO:186-082                    | <br>风扇罩密封条<br>Seal strip (fan case)<br>NO:186-083     | <br>O型圈<br>Type-O ring<br>NO:186-084                    | <br>油嘴压板<br>Press plate (oil nozzle)<br>NO:186-085 |
| <br>滤网压板<br>Strainer press plate<br>NO:186-086   | <br>机油泵压板<br>Press plate (oil pump)<br>NO:186-087 | <br>放油堵塞垫片<br>Gasket<br>NO:186-088                    | <br>油泵穿孔压板<br>Press plate<br>NO:186-089                 | <br>油泵孔垫片<br>Gasket (oil pump hole)<br>NO:186-090  |
| <br>垫片<br>Gasket<br>NO:186-091                   | <br>轴承压板<br>Press plate(Bearing)<br>NO:186-092    | <br>垫片<br>Gasket<br>NO:186-093                        | <br>进气管垫片<br>Air intake gasket<br>NO:186-094            | <br>油泵垫(0.30)<br>Gasket(0.30)<br>NO:186-095        |
| <br>垫片<br>Gasket<br>NO:186-096                   | <br>垫片<br>Gasket<br>NO:186-097                    | <br>垫片<br>Gasket<br>NO:186-098                        | <br>垫片<br>Gasket<br>NO:186-099                          | <br>全套垫片<br>Gasket set<br>NO:186-100               |
| <br>减压弹簧<br>Decompression spring<br>NO:186-101 | <br>回位弹簧<br>Back spring<br>NO:186-102           | <br>回位弹簧 2<br>Back spring 2<br>NO:186-103           | <br>回位弹簧 3<br>Back spring 3<br>NO:186-104             | <br>调速弹簧<br>Speed adjusting spring<br>NO:186-105 |
| <br>法兰面防松螺母M6<br>Nut M6<br>NO:186-106          | <br>油门调节螺栓<br>Bolt<br>NO:186-107                | <br>摇臂固定螺丝<br>Screw(fixed rocker arm)<br>NO:186-108 | <br>摇臂调整螺丝<br>Screw (adjust rocker arm)<br>NO:186-109 |  |

- |  |   |  |  |   |
|--|---|--|--|---|
| <br>风扇罩<br>Fan case<br>NO:178-001                 | <br>箱体<br>Crank case<br>NO:178-002             | <br>箱盖(高)<br>Crank case cover(high)<br>NO:178-003 | <br>气缸头总成<br>Cylinder head assy<br>NO:178-004             | <br>进排气门<br>Intake & exhaust valve<br>NO:178-005 |
| <br>气门弹簧<br>Valve spring<br>NO:178-006            | <br>气门锁片<br>Valve lock<br>NO:178-007           | <br>摇臂总成<br>Rocker arm assy<br>NO:178-008         | <br>弹簧座下座<br>Valve spring retainer (bottom)<br>NO:178-009 | <br>气门护帽<br>Valve cap<br>NO:178-010              |
| <br>挺柱<br>Valve lifter<br>NO:178-011             | <br>推杆<br>Push rod<br>NO:178-012              | <br>气缸盖罩<br>Cylinder cover<br>NO:178-013         | <br>喷油泵(电动)<br>Oil pump(electric)<br>NO:178-014          | <br>喷油泵(手动)<br>Oil pump(manual)<br>NO:178-015   |
| <br>油嘴偶件(短)<br>Oil nozzle (short)<br>NO:178-016 | <br>喷油器总成<br>Oil injector assy<br>NO:178-017 | <br>170 活塞<br>170 Piston<br>NO:178-018          | <br>178 活塞<br>178 Piston<br>NO:178-019                  | <br>活塞销<br>Piston pin<br>NO:178-020            |
| <br>170 活塞环<br>170 Piston ring<br>NO:178-021    | <br>178 活塞环<br>178 Piston ring<br>NO:178-022 | <br>卡圈<br>Circlip<br>NO:178-023                 | <br>170 连杆<br>170 Connecting rod<br>NO:178-024          | <br>178 连杆<br>178 Connecting rod<br>NO:178-025 |





机油传感器  
Oil sensor  
NO:178-026



低噪音柴油滤清器总成  
Diesel filter assy(low noise)  
NO:178-027



170开架柴油滤芯  
170 Diesel filter element(open shell)  
NO:178-028



178开架柴油滤芯  
178 Diesel filter element(open shell)  
NO:178-029



平衡轴  
Balance shaft  
NO:178-030



凸轮轴总成  
Camshaft assy  
NO:178-031



曲轴  
Crankshaft  
NO:178-032



178曲轴  
178 Crankshaft  
NO:178-033



正时齿轮  
Timing gear  
NO:178-034



调速驱动齿轮  
Driving gear  
NO:178-035



槽型键  
Rectangle key  
NO:178-036



机油泵总成  
Oil pump assy  
NO:178-037



进气管  
Air intake pipe  
NO:178-038



主轴瓦  
Main bearing  
NO:178-039



空滤器  
Air cleaner  
NO:178-040



空滤器滤芯  
Air cleaner element  
NO:178-041



连杆瓦  
Connecting rod bearing  
NO:178-042



飞轮发电机  
Fly wheel generator  
NO:178-043



飞轮发电机线圈  
Coil  
NO:178-044



静音消声器(开架)  
Mufflesience open shelf  
NO:178-045



低噪音柴油滤清器总成  
Diesel filter assy(low noise)  
NO:178-046



防震脚  
Shockproof foot  
NO:178-047



机油滤网  
Oil strainer  
NO:178-048



高压油管  
High pressure oil pipe  
NO:178-049



滚针轴承  
Needle bearing  
NO:178-050



启动载  
Starter pulley  
NO:178-051



机油标尺组件  
Oil gauge set  
NO:178-052



断路器  
Circuit breaker  
NO:178-053



风扇罩密封条  
Seal strip(fan case)  
NO:178-054



 
178 全套垫片  
178 Gasket set  
NO:178-055



170 全套垫片  
170 Gasket set  
NO:178-056



电瓶 12V17AH  
Storage battery 12V17AH  
NO:178-057



油门支架  
Throttle support  
NO:178-058



拨叉总成  
Shift fork assy  
NO:178-059



上支架  
Up-bracket  
NO:178-060



稳压器支架  
Bracket(voltage regulator)  
NO:178-061



外减压手柄  
Decompression portable  
NO:178-062



回位弹簧  
Back spring  
NO:178-063



调速弹簧  
Spring(governor)  
NO:178-064



回位弹簧 2  
Back spring  
NO:178-065



减压弹簧  
Decompression spring  
NO:178-066



回位弹簧3  
Back spring 3  
NO:178-067



垫片  
Gasket  
NO:178-068



摇臂调整螺丝  
Screw(adjusting rocker arm)  
NO:178-069



油箱支架  
Fuel tank bracket  
NO:178-070



摇臂固定螺丝  
Screw(fixed rocker arm)  
NO:178-071



导风板  
Wind scooper  
NO:178-072



油门调节螺栓  
Adjusting bolt  
NO:178-073



轴承压板  
Press plate(bearing)  
NO:178-074



油泵挺柱  
Oil pump lifter  
NO:178-075



O型圈  
O ring  
NO:178-076



油嘴压板  
Press plate(oil nozzle)  
NO:178-077



滤网压板  
Press plate(strainer)  
NO:178-078



机油泵压板  
Press plate(oil pump)  
NO:178-079



油泵孔压板  
Press plate(oil pump hole)  
NO:178-080



油泵孔垫片  
Gasket (oil pump hole)  
NO:178-081



放油罐垫片  
Gasket  
NO:178-082



垫片  
Gasket  
NO:178-083



缸盖紧固螺母  
Nut( fixed cylinder cover)  
NO:178-084



法兰面防松螺母M6  
Nut M6  
NO:178-085



垫片  
Gasket  
NO:178-086



油封  
Oil seal  
NO:178-087



面板  
Front panel  
NO:178-088



170 启动器总成  
170 Starter assy  
NO:178-089



178 启动器总成  
178 Starter assy  
NO:178-090

# 汽油机

## GASOLINE ENGINE

### EY20/167(罗宾)



启动器总成  
Starter assy  
NO:EY20-001



导风罩  
Wind Scooper  
NO:EY20-002



箱体  
Crank case  
NO:EY-003



缸头总成  
Cylinder head assy  
NO:EY20-004



化油器  
Carburetor  
NO:EY20-005



油管  
Fuel pipe  
NO:EY20-006



曲轴  
Crankshaft  
NO:EY20-007




凸轮轴  
Camshaft  
NO:EY20-008



曲轴油封 14  
Oil seal 14  
NO:EY20-009



 活塞  
Piston  
NO:EY20-010



活塞环  
Piston ring  
NO:EY20-011



活塞销  
Piston pin  
NO:EY20-012



活塞销卡簧  
Clip(piston pin)  
NO:EY20-013



进排气门弹簧座  
Retainer in & Ex valve spring  
NO:EY20-014



气门弹簧  
Valve spring  
NO:EY20-015



气门油封  
Oil seal(valve)  
NO:EY20-016



挺柱  
Valve lifter  
NO:EY20-017



摆杆支架  
Plate push rod guide  
NO:EY20-018



调速摆杆  
Governor arm shaft  
NO:EY20-019



连杆总成  
Connecting rod assy  
NO:EY20-020



连杆配件  
Connecting rod kit  
NO:EY20-021



高压包  
Ignition coil  
NO:EY20-022



熄火开关  
Stop switch  
NO:EY20-023



调速手柄  
Governor portable  
NO:EY20-024



调速齿轮总成  
Governor gear set  
NO:EY20-025



滑套  
Governor slider  
NO:EY20-026



火花塞  
Spark plug  
NO:EY20-027



启动轮  
Starter pulley  
NO:EY20-028



机油标尺  
Oil gauge set  
NO:EY20-029



深沟球轴承  
Ball bearing  
NO:EY-030



空滤器  
Air cleaner  
NO:EY20-031



消声器罩  
Muffler cover  
NO:EY20-032



消音器  
Muffler  
NO:EY20-033



油箱总成  
Fuel tank assy  
NO:EY20-034



油开关  
Fuel tap  
NO:EY20-035



全套垫片  
Gasket set  
NO:EY20-036



调速拉杆  
Governor pull rod  
NO:EY20-037



呼吸器阀片  
Breath valve  
NO:EY20-038



USK-001  
USK-001  
NO:EY20-039



挡风板  
Windproof plate  
NO:EY20-040



USK-002  
USK-002  
NO:EY20-041



USK-003  
USK-003  
NO:EY20-042



调速臂  
Governor arm  
NO:EY20-043



飞轮  
Fly wheel  
NO:EY20-044



压簧  
Pressing spring  
NO:EY20-045



调速拉簧  
(governor(Spring)  
NO:EY-047



拉杆拉簧  
Spring/pull rod(  
NO:EY20-048



U型键  
U-shape key  
NO:EY20-049



调速轴  
Governor shaft  
NO:EY20-050



垫圈  
Washer  
NO:EY20-046



螺母  
Nut  
NO:EY20-051



螺栓  
Bolt  
NO:EY20-052



油箱盖  
Fuel tank cap  
NO:EY20-053

# 通机启动器 GENERATOR STARTER



名称: 950启动器  
950 STARTER ASSY.  
NO:T01



名称: 152老款启动器拉盘  
152 STARTER ASSY.  
NO:T02



名称: 154老款启动拉盘  
154 STARTER ASSY.  
No:T04



名称: EY20启动拉盘  
Ey20 STARTER ASSY.  
No:T03



名称: 154铁爪启动拉盘  
154 STARTER ASSY. IRON  
No:T05



名称: 168塑爪启动拉盘  
168 STARTER ASSY. PLASTIC  
No:T06



名称: 168铁爪启动拉盘  
168 STARTER ASSY. IRON  
No:T07



名称: 2900塑爪启动拉盘  
2900STARTER ASSY.PLASTIC  
NO:T09

名称: 170塑爪启动拉盘(柴油)  
170 STARTER ASSY.PLASTIC  
NO:T10



名称: 188铁爪启动拉盘  
168 STARTER ASSY.IRON  
NO:T11

名称: 166铁爪启动拉盘  
166 STARTER ASSY.IRON  
NO:T12




名称: 178塑爪启动拉盘(柴油)  
178 STARTER ASSY.PLASTIC  
NO:T13

名称: 173铁爪启动拉盘  
173 STARTER ASSY.IRON  
NO:T15



名称: EY20启动拉盘(A)  
Ey20 STARTER ASSY.  
No:T16-1


名称: EY15  
Ey15 STARTER  
No: T19

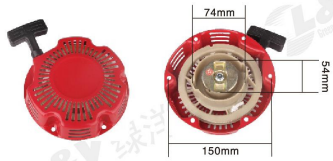


名称: 154新款铁爪启动拉盘  
154 STARTER  
No: T20



 
名称: 154塑盘塑爪启动拉盘  
154 STARTER  
No: T21



名称: 2900 铁爪启动器  
2900 STARTER  
NO:T22

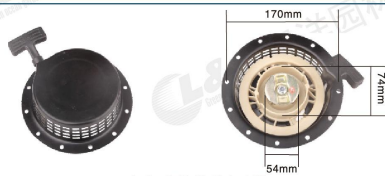

名称: 170 铁爪启动器  
170 STARTER  
NO:T23

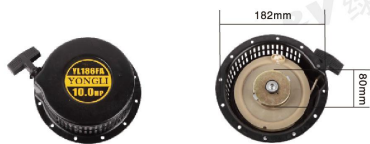

名称: 178 铁爪启动器  
178 STARTER  
NO:T24



名称: 186 铁爪启动器  
186 STARTER  
NO:T25



名称: 170铁爪启动拉盘  
170 STARTER ASSY. IRON  
NO:T26